



GTX STEERING WHEEL

(15-17 MUSTANG)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) GTX Steering Wheel

TOOLS REQUIRED


Trim Panel Removal Tool
T20 Torx Bit
1/2" Ratchet & Extension
24mm Socket
Screw Driver Pick Set
Needle Nose Pliers

SKU # 407944/408012




STEP 1

Begin by disconnecting the battery terminals, failure to do so could result in deployment of the airbag. Next, insert a pick, small flat head screwdriver, or Allen key into the holes located on each the side of the steering wheel. Press the tool into the hole to release the airbag retaining clip. This will release the airbag from the steering wheel.

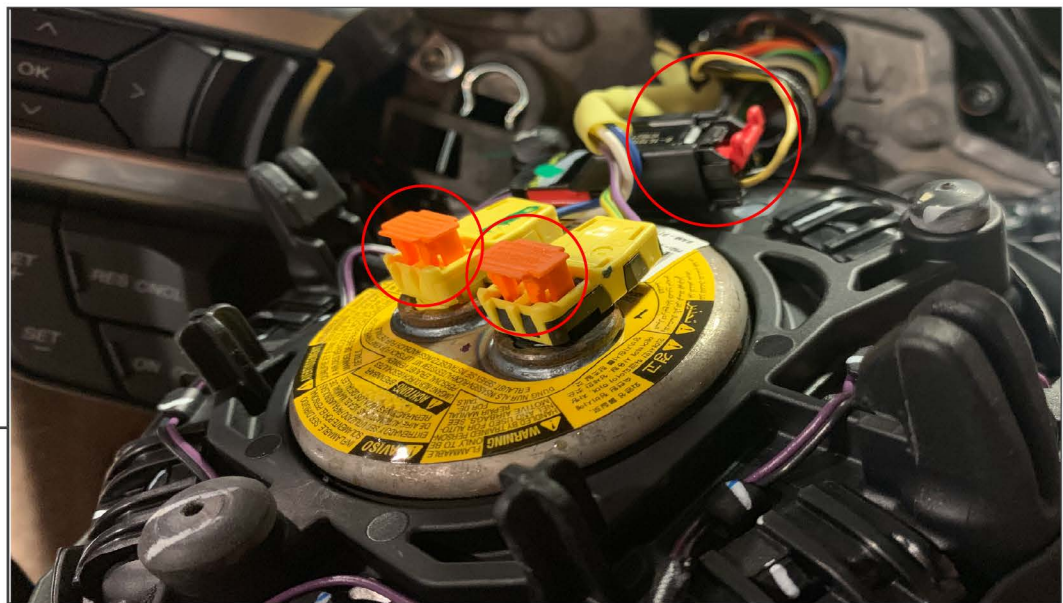


STEP 2

Disconnect the air bag from the vehicle by removing the (3) remaining plugs. Remove the yellow air bag connectors by lifting the orange locking tabs and then, pull the plug straight up to remove. Remove the remaining black plug by sliding back the red locking tab and depressing the tab to remove the connector.

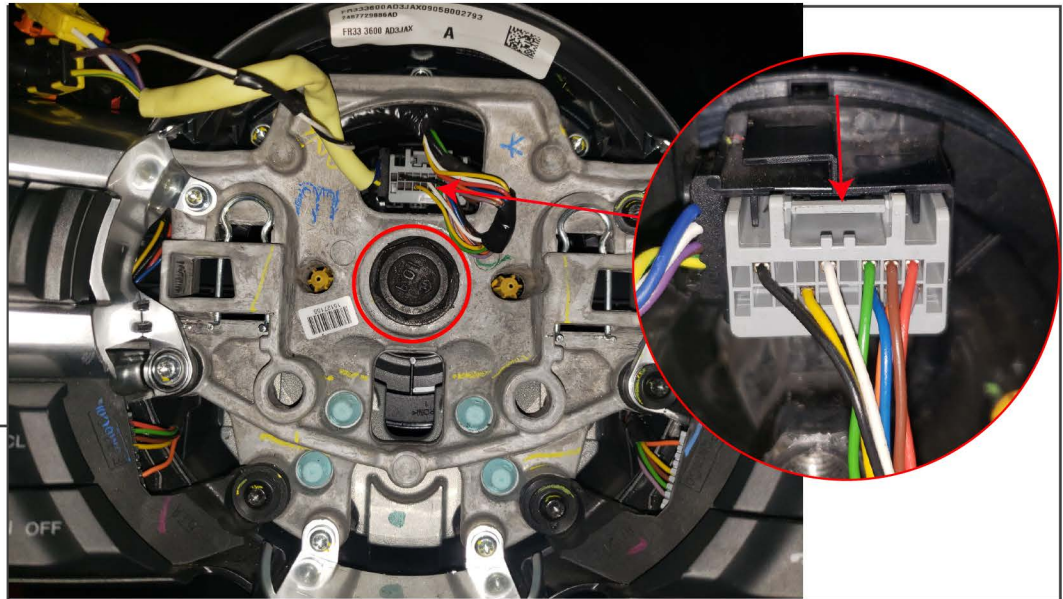


STEP 3

Remove the wiring harness by depressing the clip and pull the plug away from the steering column. Using a 24mm socket, remove the nut securing the steering wheel to the vehicle. Once the nut is removed, firmly hold both sides of the steering wheel and rock it side to side, this will release the wheel from the steering column.

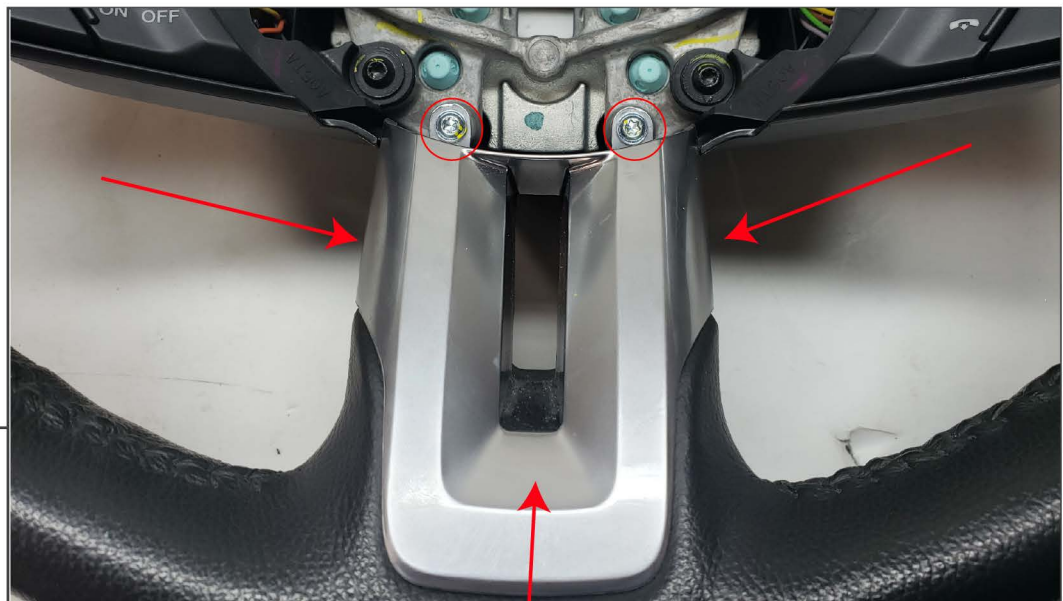

STEP 4

Using a T20 torx bit and a trim panel removal tool, carefully pry the plastic cover away from the steering wheel.

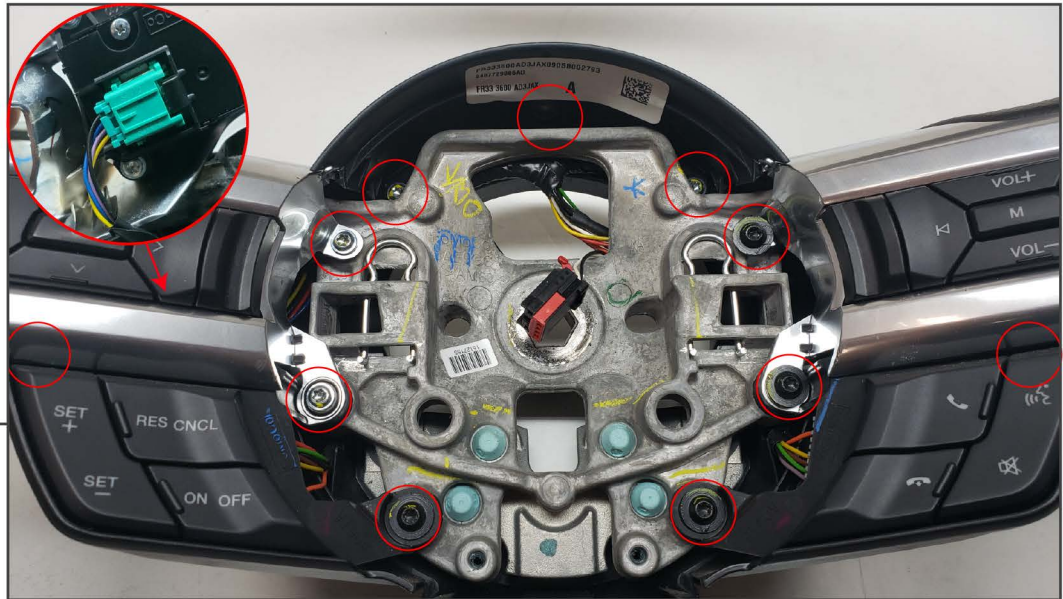

STEP 5


Locate, and remove the T20 torx bit screws securing the controls to the factory steering wheel. Unplug, and remove the controls from the steering wheel. Transfer to the new steering wheel.



STEP 6


Lay the factory steering wheel face down. Using a trim panel removal tool, gently pry up on the factory plastic trim cover. Remove the factory cover and wiring harness from the factory steering wheel.

STEP 7

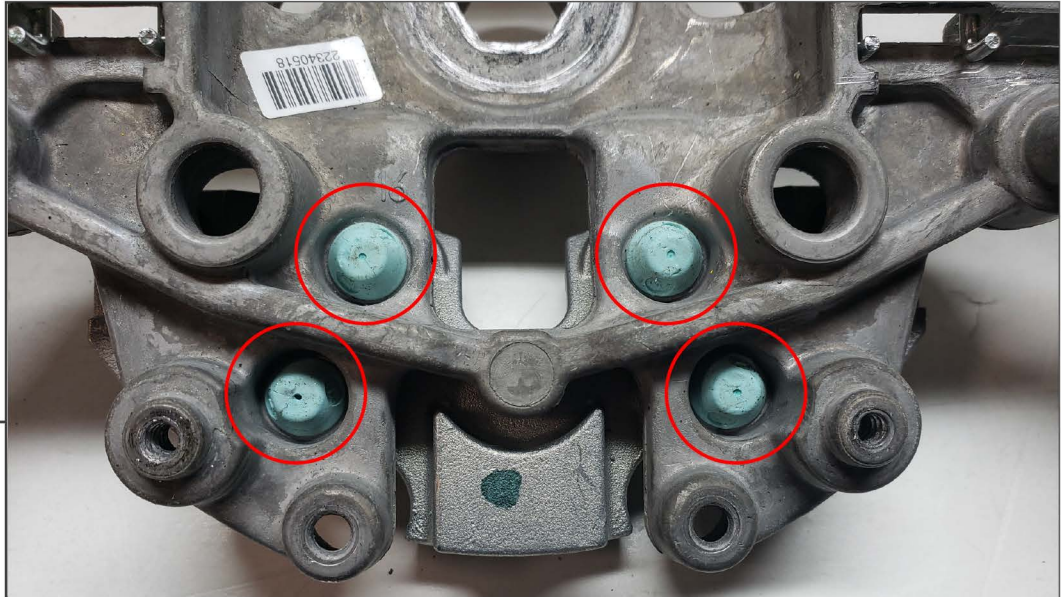

Carefully pry the weighted bracket from the factory steering wheel. Transfer weighted bracket to the new steering wheel by using needle nose pliers to pull the rubber inserts through the aluminum frame. Reinstall the plastic trim removed in step 6.

STEP 8

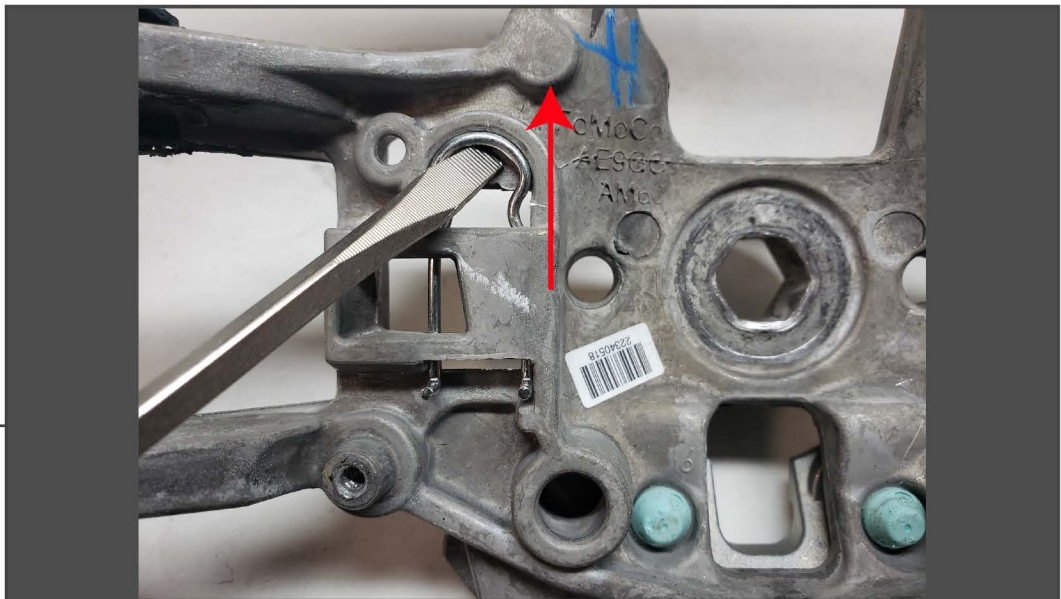

Using a flat head screw driver, pry up and away on the airbag retaining clips. Transfer to the new steering wheel.



STEP 9

Install the steering wheel in reverse order. Torque the 24mm steering wheel nut to 35 ft/lbs. Reconnect all electrical connections before pressing the airbag back onto the steering wheel. Finally, reinstall the battery terminals to complete the installation.