


#### CONTROLLED **RHINO-RACK** RTC12JW - Jeep Wrangler TJ 2 dr Canopy Rhino Track Mount Important: Please read these instructions carefully prior to installation. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations. Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete. **Parts List** Maximum carrying capacity: 30kg Part No. Item **Component Name** Qty 1 RCP Track End Cap (RIGHT) 2 M525 1 2 RCP Track End Cap (LEFT) 2 M526 3 2 2 3 A256-1200 Rhino Track 1200mm 4 M6 x 25mm T-Bolt 10 B015 5 Knob & M6 Nyloc Nut 10 M175 6 6mm x 3mm O-ring 6 C347 7 **Butyl Patches** 10 C1266 8 Fitting Instruction 1 RR-141 **Care Instruction:** Layout Clean the vehicle canopy prior to fitting the Rhino Tracks. **Tools Required** Vacuum cleaner. Tape measure. Pencil. Power or Battery drill. 6.0mm drill bit. 1 Using a pencil mark out a drilling centreline **60mm** from the edge of the 2nd roof channel in. Use one edge of the Track as a straight edge to rule a line (this will be the centreline of the Track). Using a Tape Measure plot 5 points taking each measurement from the small groove towards the rear of the canopy. Measure 85mm from that same groove and place a line, this is where the end of the track will lie. **TOP VIEW OF CANOPY** REAR FRONT 85mm €0mm **6**0mm 6 Measure from 120mm the groove. Measure 60mm 320mm from the edge 805mm of the canopy 1030mm

1255mm

channel.

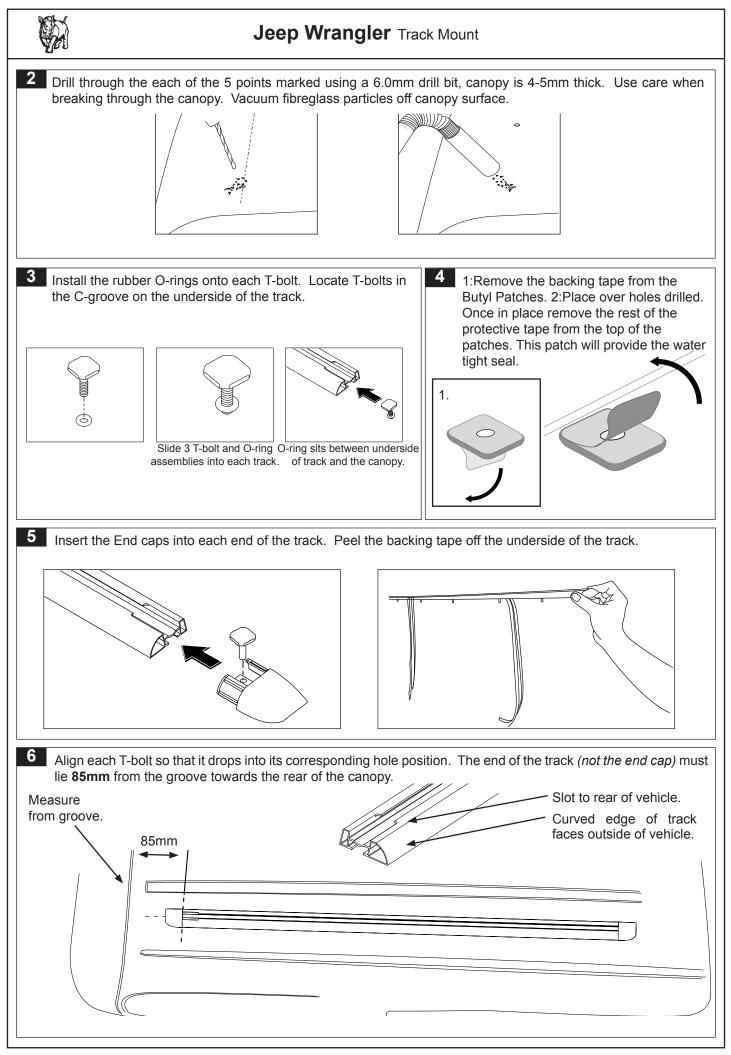

Jeep Wrangler Track Mount

7
Double check that all T-bolts have O-rings fitted. Gently finger tighten T-bolts only at this stage. Once all threads have been started tighten the centre knobs and work towards the ends. DO NOT OVER TIGHTEN.

FRONT
FRONT

Image: Comparison of the shown of t

# **Important Information**

# Recommendations

It is essential that all bolt connections be checked after driving a short distance when you first install your crossbars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof bars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

# USE ONLY NON-STRETCH FASTENING ROPES OR STRAPS.

### SENSITIVITY TO CROSSWINDS, BEHAVIOUR IN CURVES AND BRAKING.

The handling characteristics of the vehicle, changes when you transport a load on the roof. For safety reasons, we recommend you exercise extreme care when transporting wind-resisting loads; special consideration must be taken into account when braking.

# PLEASE REMOVE CROSSBARS WHEN PUTTING VEHICLE THROUGH AN AUTOMATIC CAR WASH.

# LOAD RATINGS

**Maximum carrying capacity 30kg per pair of roof racks.** When roof racks are to be used in extreme off road conditions please build a safety factor of 1.5 into the load rating. Although the roof racks are tested and approved to AS1235-2000, Australian road conditions can be much more rigorous. However, increasing the number of crossbars does not increase the vehicles maximum permissible roof loading.

# IMPORTANT NOTE FOR DEALERS AND FITTERS

Rhino-Rack cannot be held responsible for incorrect mounting of units or useage that exceeds production tolerance. If any of these fitting instructions are unclear to you, the fitter, please contact Rhino-Rack. It is your responsibility to ensure the instructions are given to the end user or client.

Rhino-Rack 3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Document No: RR-141 Prepared By: Craig Jones Authorised By: Gary England

Issue No: 04 Issue Date: 09/03/2015

These instructions remain the property of Fetovu Pty Ltd T/as Rhino-Rack and may not be used or changed for any other purpose than intended.

