

Wheel Spacer Installation Guide

Contents:

(4) Wheel Spacers
(24) Spacer Nuts
(1) Loctite Packet

Tools Required:

19, 21mm sockets
Floor Jack
Jack Stands



//Step 1:

Begin by loosening the lug nuts on the vehicle using a 21mm socket and a breaker bar. Once the lug nuts are loose, raise and support the vehicle using a floor jack and jack stands. Remove the wheel from the vehicle.

// Step 2:

Apply moderate amount of loctite to provided nuts, then install spacer on hub and tighten nuts onto hub studs using a 19mm socket, and torque to 140 ft/lbs.

//Step 3:

Once the spacer is secure, reinstall the wheel onto the wheel spacer. Install lug nuts to securely hold wheel straight and in place.

// Step 4:

Lower the vehicle off of the jack stands and torque lug nuts to 140 ft/lbs. Installation is now complete.