



2015 STYLE TAIL LIGHTS

(2010-2012 MUSTANG ALL)

INSTALLATION INSTRUCTIONS

CONTENTS

11mm Deep Socket Or Wrench
Flat-Head Screwdriver Or
Trim Removal Tool


TOOLS REQUIRED

STEP 1



Open the trunk and remove the plastic trunk liner by removing the (4) clips securing it to the body.

STEP 2

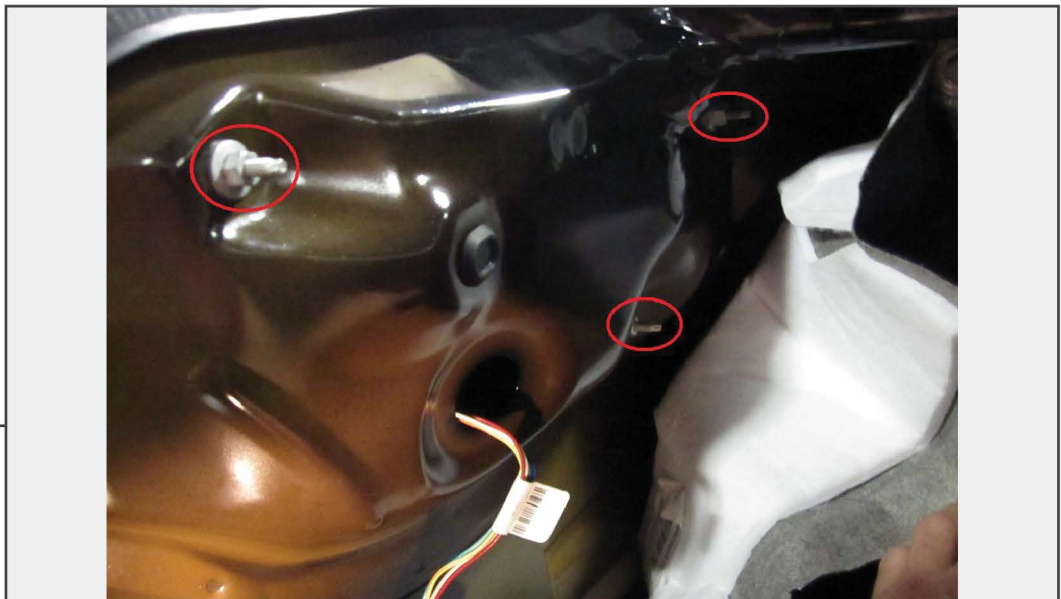

Remove the (3) 11mm nuts holding the factory taillight to the body.

STEP 3



Unplug the taillight harness from the main connector, and pull the grommet and harness through the body hole. Remove taillight.

STEP 4



Install the new taillights by reversing the steps. Installation is now complete.

LIGHTS WILL OPERATE EXACTLY AS OEM. THE SEQUENTIAL FUNCTION WILL ONLY OPERATE WITH THE TURN SIGNALS. FOR FULL SEQUENTIAL FUNCTION PLEASE PURCHASE THE RAXIOM TAIL LIGHT SEQUENTIAL HARNESS.