

LED PROJECTOR HEADLIGHTS

(2010-2012 FORD MUSTANG)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) LH Headlight
- (1) RH Headlight
- (1) DRL Harness
- (2) HID to Halogen Adapter Harnesses

TOOLS REQUIRED

- 7mm, 8mm, 10mm, 19mm Sockets
- Ratchet
- Panel Removal Tool
- Jack and Jack Stands


STEP 1

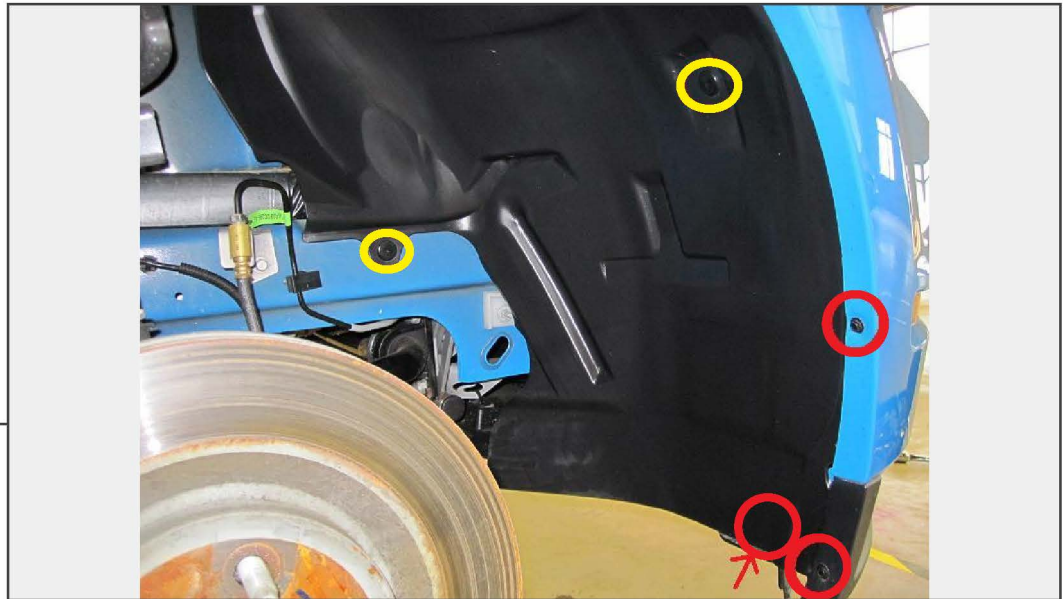

Lift and support the vehicle using a jack and jack stands. Remove the wheel from the vehicle. Remove (3) 7mm screws and (2) plastic push clips from the inner fender liner.

Repeat this procedure for the opposite side of the vehicle.

STEP 2

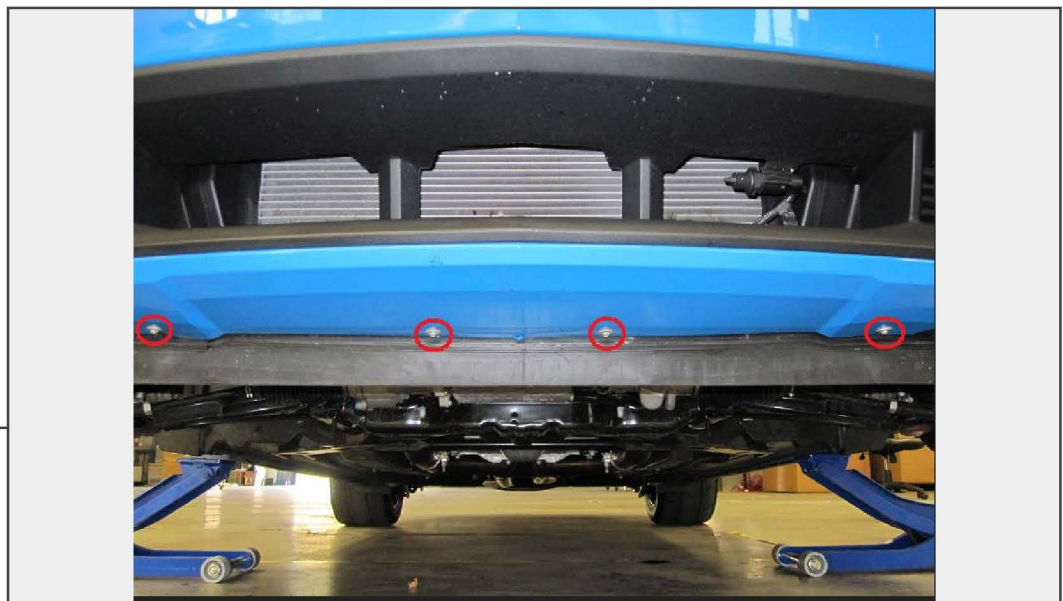


Remove (4) 7mm screws from the lower portion of the bumper.



STEP 3

Remove (8) plastic push clips using a panel removal tool. Lift the radiator support cover from the vehicle and set aside.

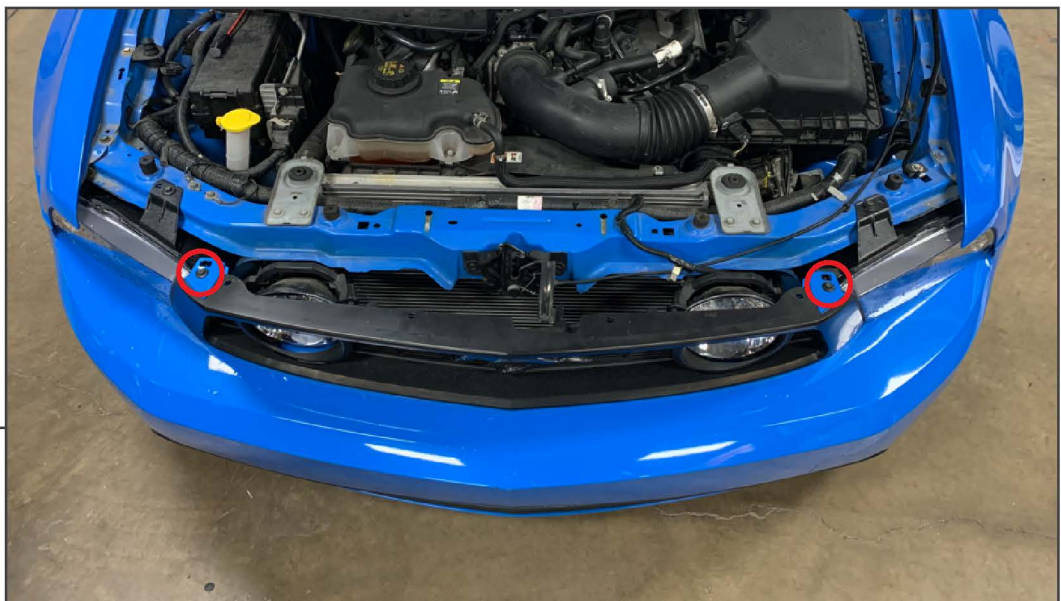

STEP 4


Remove (2) 8mm bolts from the bumper assembly. Lift the bumper over the (2) plastic tabs to allow the front of the bumper to move forward on the vehicle.

STEP 5



Grab the corner of the bumper where it meets the fender, and firmly pull forward to allow the bumper to separate from the fender on both sides of the vehicle. Disconnect the side marker light connectors and fog light connectors. Lift and set bumper aside carefully to prevent damage.

STEP 6

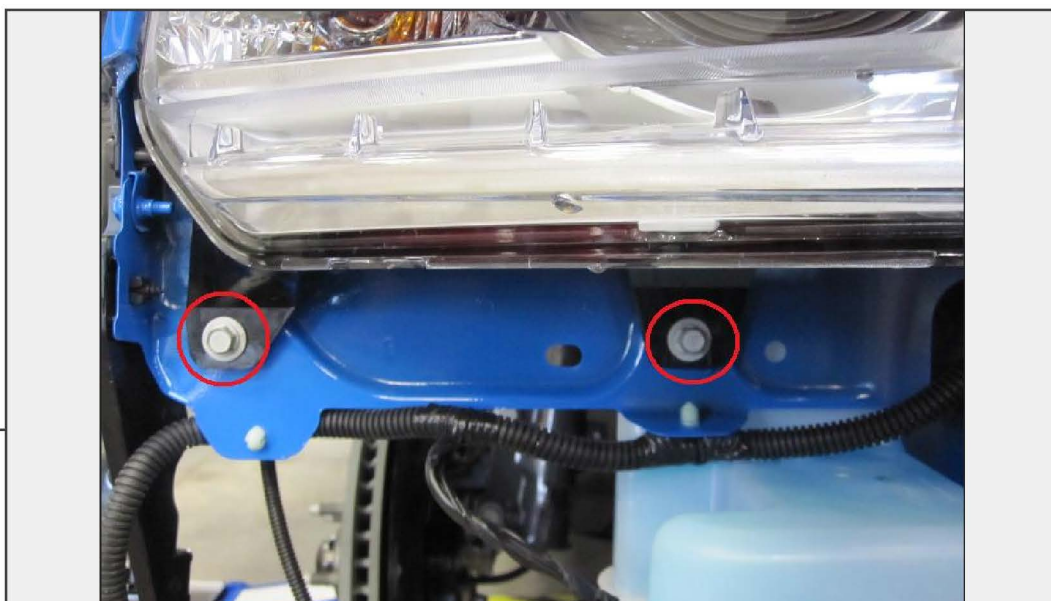

Remove (2) 10mm bolts from underneath the headlight assembly.


Repeat this procedure for the opposite side of the vehicle.



STEP 7

Remove (1) 10mm bolt from the top of of the headlight in the radiator support. Pull the headlight from the vehicle and unplug the (2) electrical harnesses.


Repeat this procedure for the opposite side of the vehicle.

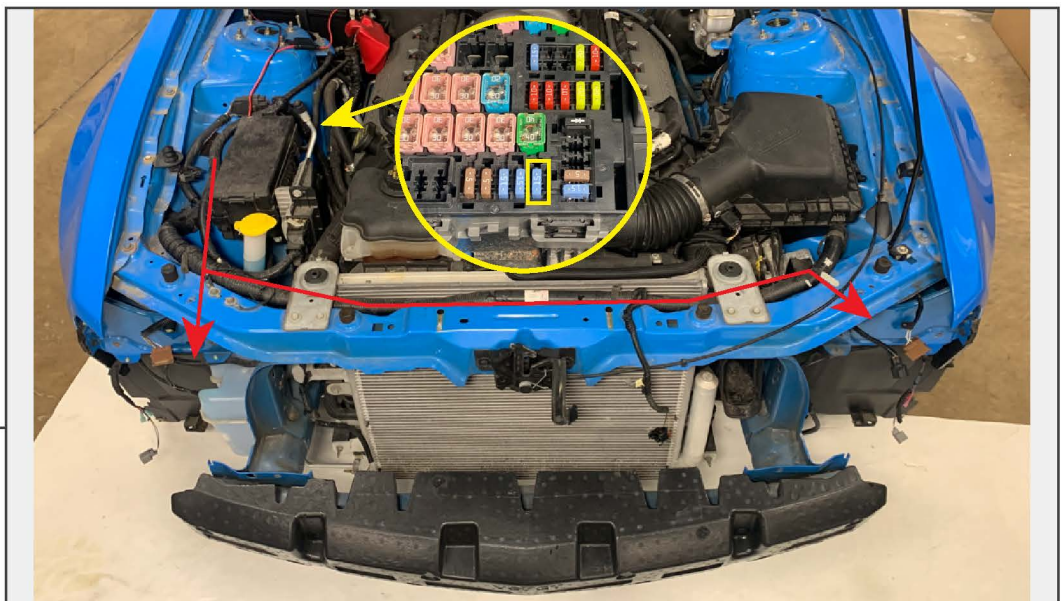

STEP 8

Route the provided (1) DRL harness neatly across the engine bay. Ensure the fuse tap is located on the RH side of the vehicle to access the fuse box. Insert the fuse tap into fuse # 49 in the fuse box and route the harness outside the box to allow the lid to close.

STEP 9

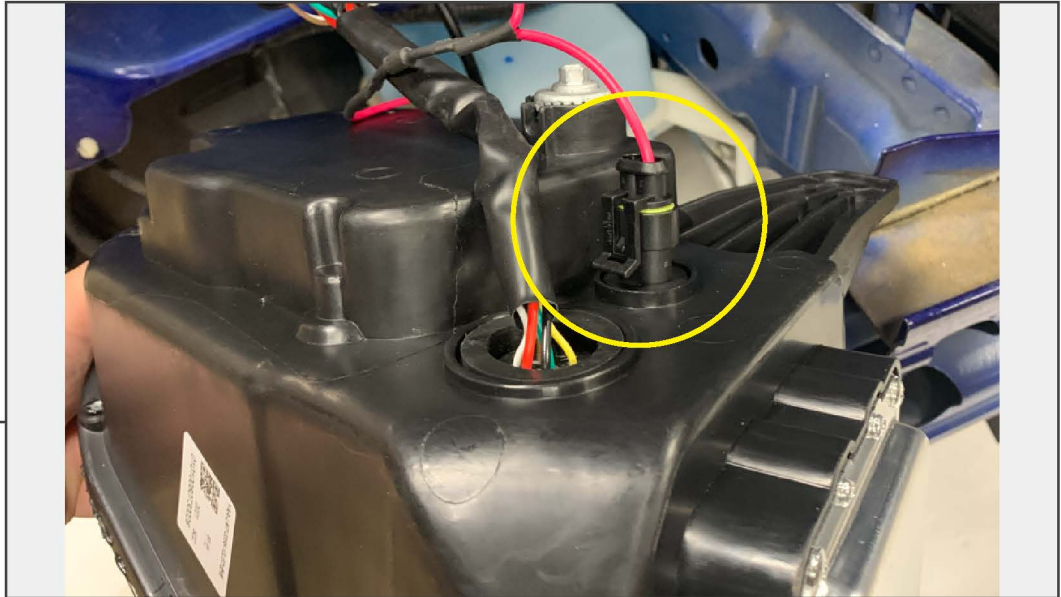

Plug the DRL harness into the backside of the headlight assembly. Plug in the (2) headlight wiring harnesses into the corresponding vehicle harness. Ensure the connectors click into place secure the connection. Repeat this procedure for the opposite side of the vehicle.

Note: If vehicle has OEM HID headlights, use the included adapter harnesses in between the vehicle harness and the new headlight.

STEP 10



Secure the new headlight into the vehicle reusing the (3) original 10mm bolts. Tighten until secure.

Repeat this procedure for the opposite side of the vehicle.



STEP 11

Re-assemble the vehicle following steps 1-5 in reverse order.

Installation is now complete.