



SPARE TIRE DELETE

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

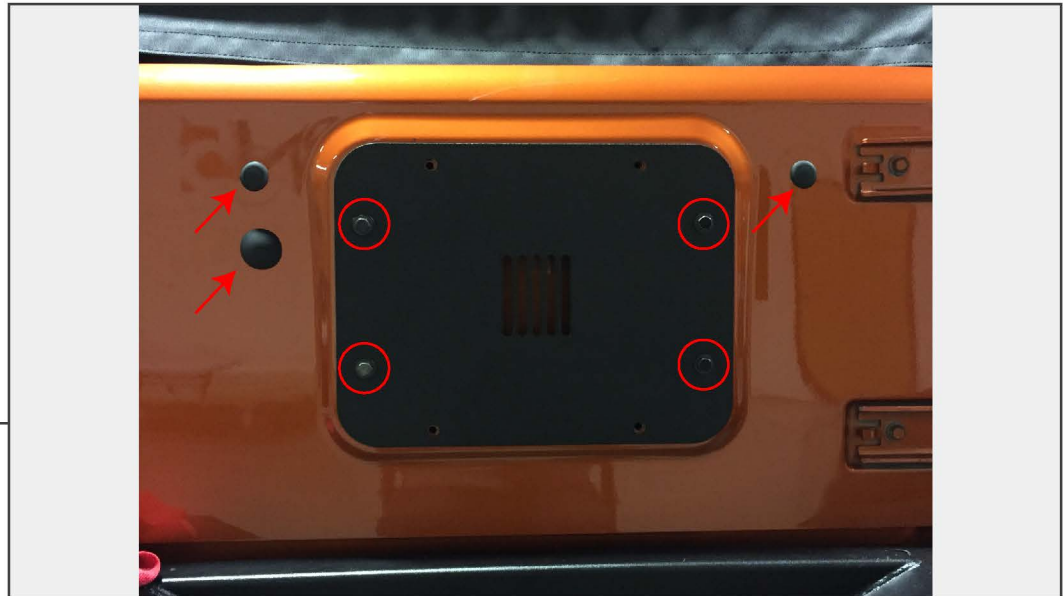
CONTENTS

- (1) Back Plate
- (1) License Plate Bracket
- (2) Small Grommets
- (1) Large Grommet
- (1) Hardware Kit

TOOLS REQUIRED

- Flathead Screwdriver
- Plastic Pry Tool
- Socket Set

SKU # J106612

**STEP 3**

Install the Spare Tire Delete back plate by loosely installing the factory bolts in the holes circled above. Install the (2) small grommets in the factory spare tire bumper mount locations, and the large grommet where you disconnected the factory 3rd brake light.

**STEP 4**

Install your license plate on the outer bracket off the car for ease of installation. Use the (4) Allen head bolts, washers and lock nuts included.

**Note: License plate is installed backward for photo purposes only.

**STEP 5**

Install the license plate bracket on top of the back plate. With the bolts loose, align the brackets so that they are flush with each other on the top and bottom. Then tighten all bolts.

Installation is now complete.