



REAR BRAKE LINE EXTENSIONS

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS


(1) Set of Rear Brake Lines

TOOLS REQUIRED

Line Wrenches
10mm Socket
Ratchet

SKU # J106869

STEP 1

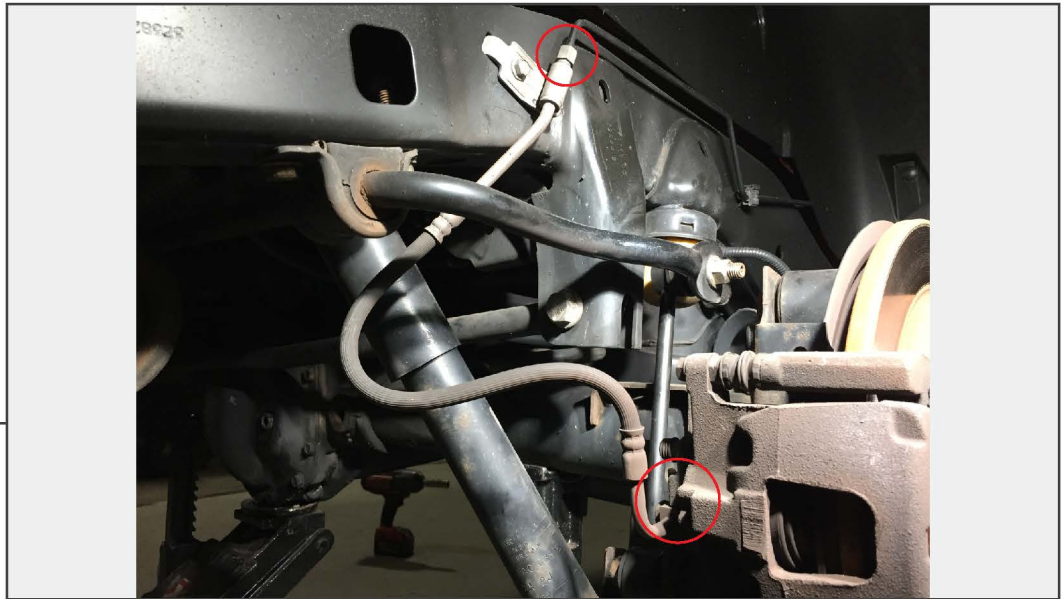

Raise and support the vehicle. Remove the rear wheels for better access to the brake lines. Disconnect the banjo bolt at the caliper. Then, disconnect the hard-line located on the frame.

STEP 2




Remove the 10mm bolt to remove the brake line from the vehicle.

STEP 3




Install the new brake line bracket using the original bolt.

STEP 4

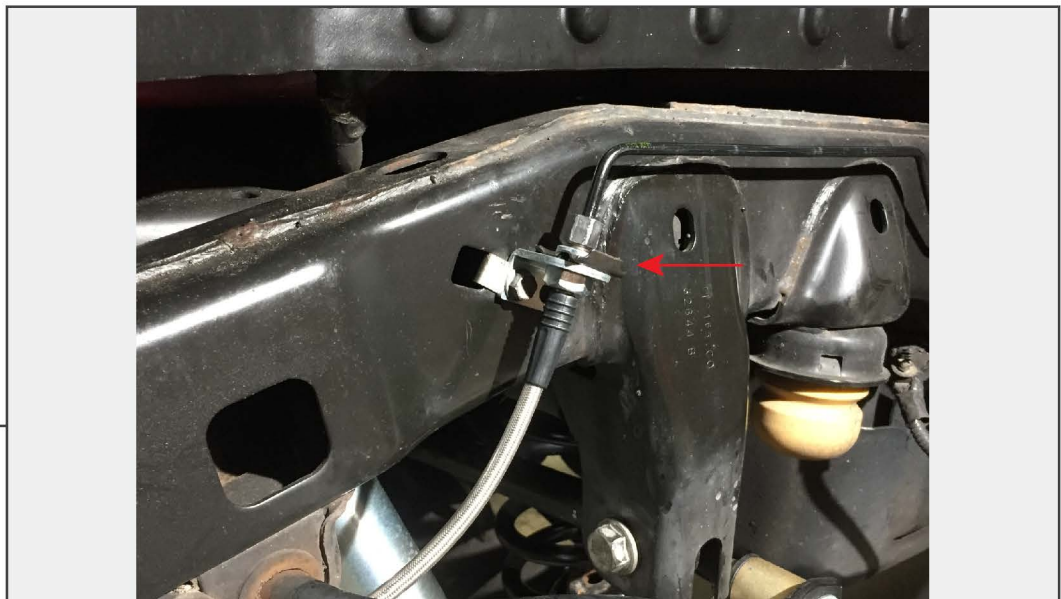

Connect the new brake line to the factory hard-line. Then, install the supplied clip to secure the new brake line to the brake line bracket.

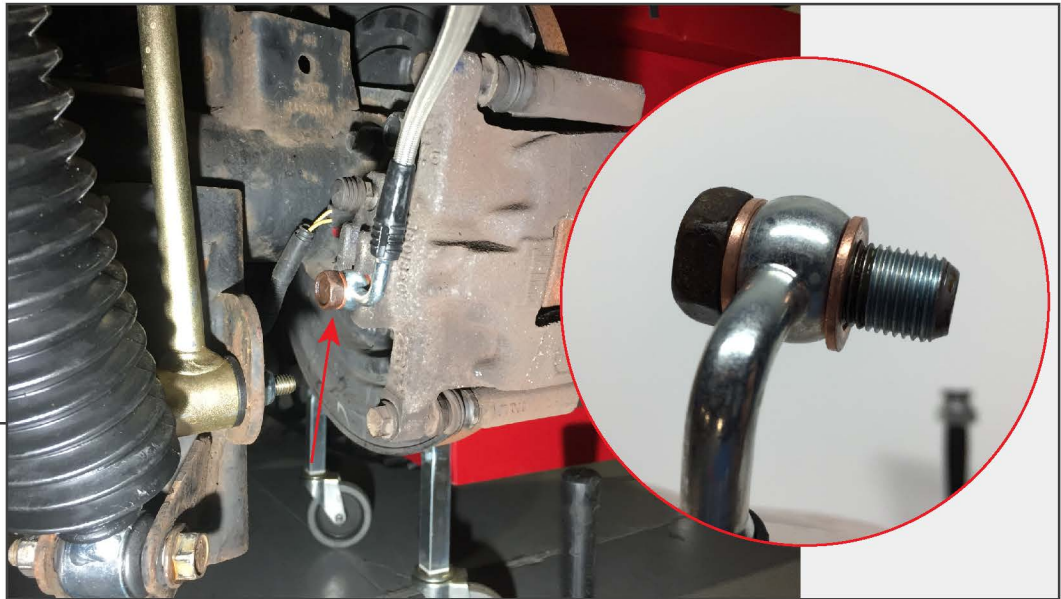

STEP 5

Use the provided copper crush washers on the factory banjo bolt, connect the brake line to the caliper.



STEP 6

Repeat steps 1-5 for the remaining brake line.
Ensure to bleed the braking system after brake lines are installed to ensure proper functionality.

Installation is now complete.