



## Wilderness Accessories High Lift Jack Bracket

### Part# 29900

#### Parts List

- 1-6" Front Mounting Bracket
- 1-6" Rear Mounting Bracket
- 2-6" Backing Plates
- 2-Spacers(4" High Sides)
- 2-1/2" x 1 3/4" Coupling Nut
- 4-1/2" x 2 1/4" Bolts
- 4-1/2" Lockwashers
- 2-1/2" x 1 1/4" Bolts
- 10-1/2" SAE Flatwashers
- 2-1/2" Nylon Locknuts

#### Installation Instructions

##### (Note!!!!!!)

This high lift jack bracket will fit 4" high and 6" high Wilderness roof racks and 6" high A.M. General Hummer factory OEM roof racks. The jack can be mounted to the roof rack side outside(Figure 6) or inside(Figure 7) and also mounted to the roof rack flooring(Figure 8).


1. Install front bracket to side of rack(6" side) as shown in figures 1,2, & 4. If mounting to a 4" high side rack refer to figures 1,2, & 9, and use spacer. If mounting to flooring refer to figures 1,2,4 & 8.
2. Slightly tighten to hold in place
3. Install rear bracket as shown in figures 1,3,5 & 10. Use approximate spacing shown in figure 1. Leave loose for adjustment.
4. Position jack on front & rear brackets. Adjust top bolt on front bracket so the coupling nut fits inside the jack as shown in figures 4 & 9. NOTE!!! The top bolt on both front and rear brackets are adjustable. Tighten front mounting bolts.
5. With the proper spacing between brackets, adjust the rear mount top mounting nut so that it is in the center of the oval hole in the jack, as shown in figures 1,3,5 & 10. Tighten rear mounting bracket.
6. Once the brackets have been installed and adjusted to fit your high lift jack, the jack can be removed & re-installed using just the (2)-1/2" x 1 1/4" bolts, as shown.

# WILDERNESS ROOF RACK

## HIGH LIFT JACK MOUNTING BRACKET

PART# 29900

APPROX-----SPACING BETWEEN BRACKETS 20"

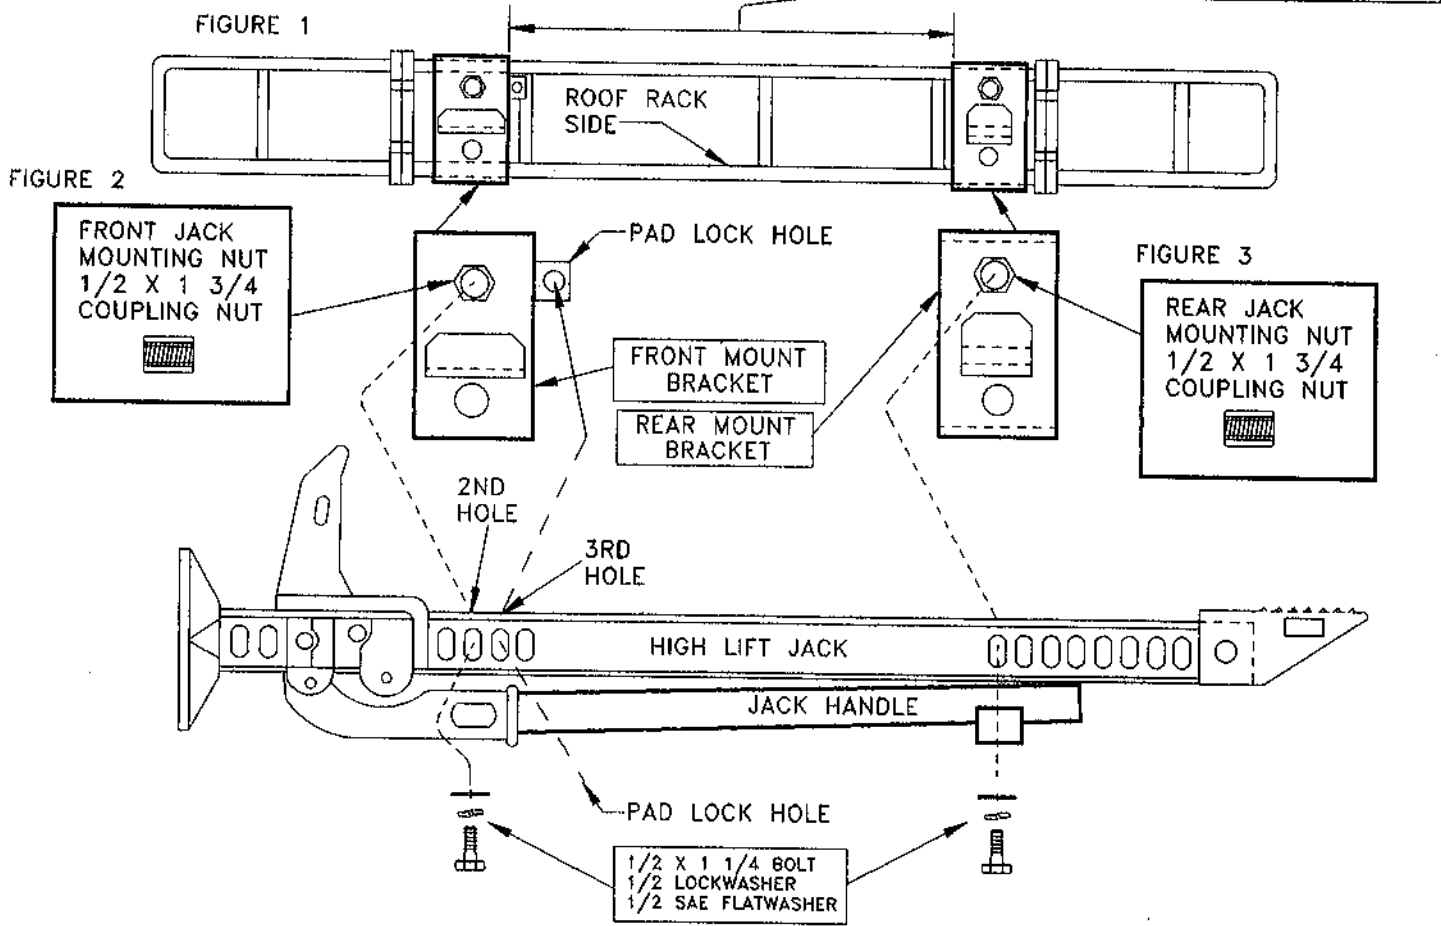

**FIGURE 4 [FRONT MOUNT BRACKET] 6" SIDE SHOWN**

**FIGURE 5 [REAR MOUNT BRACKET] 6" SIDE SHOWN**

