



HD FOLDING DOOR HINGE STEP

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Step Assembly
- (4) M8x30mm Allen Bolts
- (1) Locking Knob

TOOLS REQUIRED

- T-50 Torx Socket
- 5mm Allen Socket
- Masking Tape
- Ratchet


SKU # J139383

STEP 1



Remove the (2) T-50 Torx bolts securing the hinge pin to the hinge. Disconnect the limiting strap and electrical connection to the door from inside the vehicle.

STEP 2

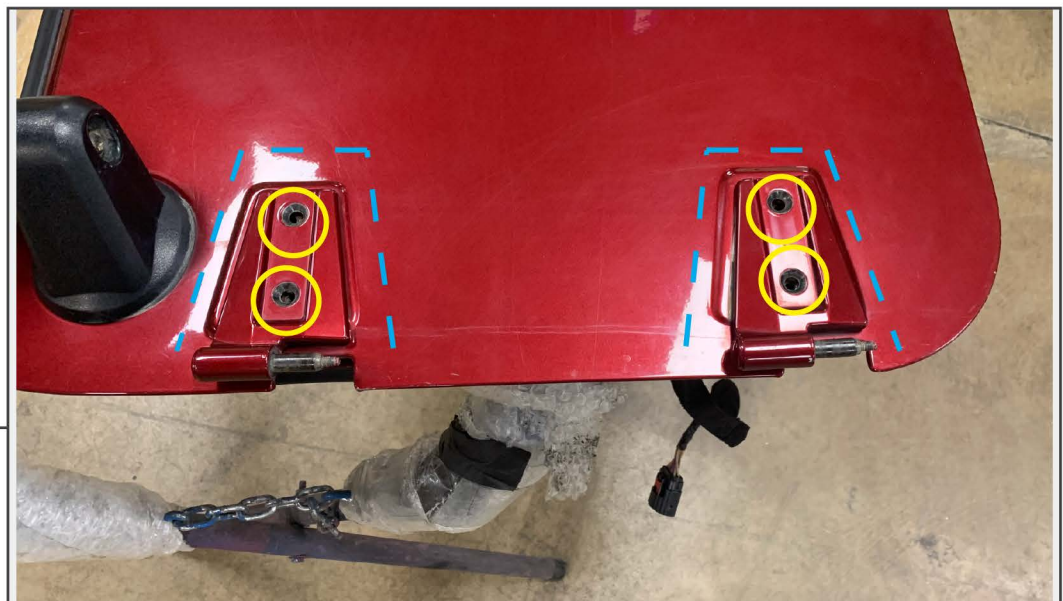

Lift the door off the vehicle and onto a stable surface. Make a line with masking tape around the hinges to indicate where the hinges align for reassembly. Remove (2) T-50 Torx bolts from each hinge.

STEP 3



Place the step onto the hinges. Secure the step assembly to the hinges by using (4) M8x30mm Allen bolts.

STEP 4



Install the (1) Locking Knob into place to secure the step from folding.



STEP 5

Reinstall the door to the vehicle following step 1 in reverse order. To use the step, remove the Locking Knob and fold the step down.

Installation is now complete.