



# REAR CARGO NET

(1997-2006 WRANGLER TJ, EXCLUDING UNLIMITED)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Driver's Side Net
- (1) Passenger's Side Net
- (1) Central Net


### TOOLS REQUIRED

---

N/A


SKU # J140389

**STEP 1**

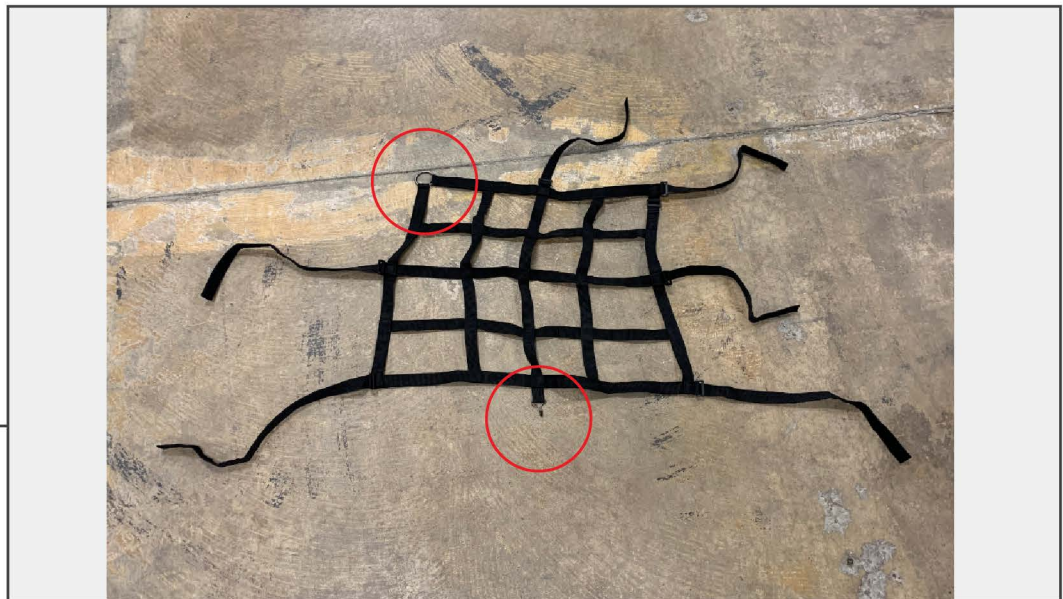

Lay out the cargo nets and become familiar with the hook locations.

**STEP 2**

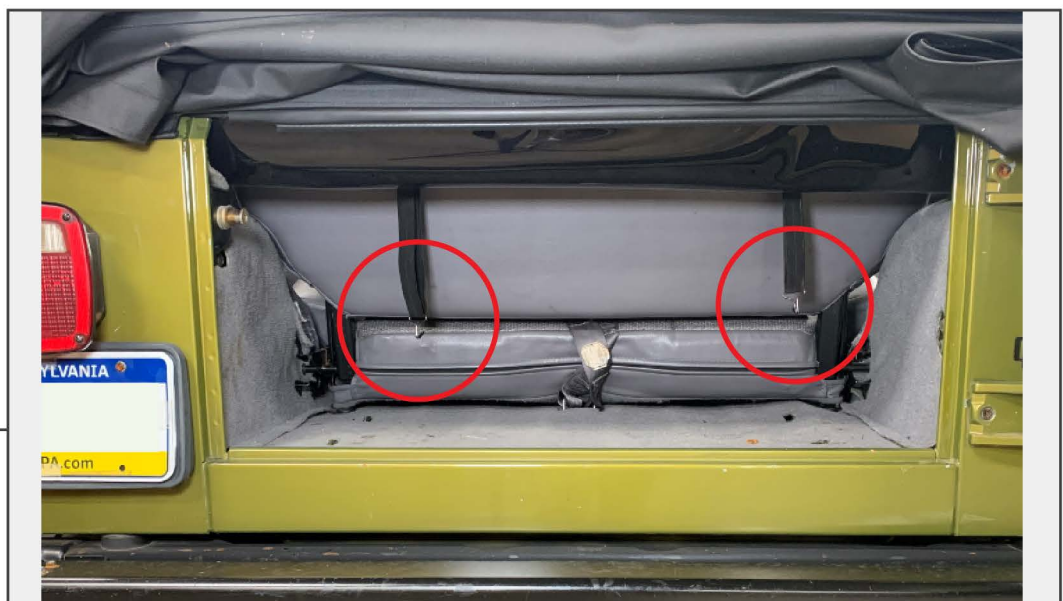

Drape the central net over the roll bar in the middle of the vehicle. Be sure the (2) hooks are located towards the rear of the vehicle as these will hook in the cargo area.



**STEP 3**

Loosely trap the central net into place starting with the roll bar in the center of the vehicle, then moving towards the side roll bars.



**STEP 4**

Familiarize the layout of each side net. Orientate the side net where the hook is pointed towards the outside of the vehicle. Using the Velcro straps, loosely attach the side net to the roll bar. Be sure the metal ring is located at the top rear of the roll bar on both sides.





**STEP 5**

Tighten all the straps on each net to secure the cargo net into place. Attach the hooks at the bottom of the side nets to the vehicle above the quarter panel.



**STEP 6**

Attach the hooks at the bottom of the central net to the vehicle mounts in the cargo area.



---

**STEP 7**

Installation is now complete.