



# REPLACEMENT DOOR HINGE KIT

(2007-2018 WRANGLER JK)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(8) Door Hinges  
(16) M8x20mm Allen Bolts


### TOOLS REQUIRED

---

T-50 Torx Socket  
5mm Allen Socket  
Ratchet

SKU # J141414

**STEP 1**

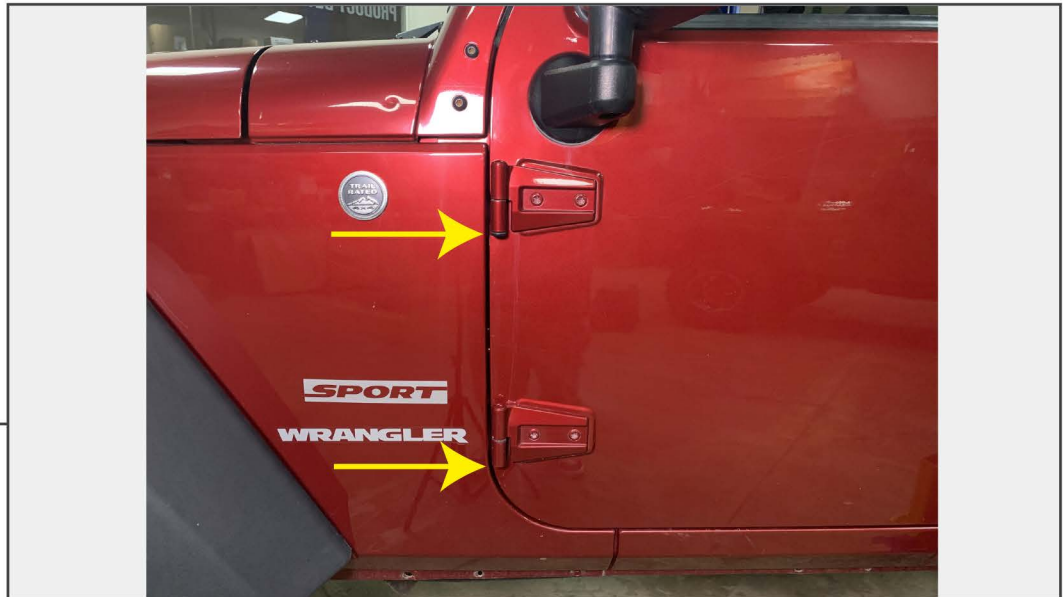

Remove door from vehicle by removing (2) T-50 Torx nuts from the bottom of the hinge. Unplug the door connector and release the limiting strap. Lift door away from vehicle.

**STEP 2**




Remove (2) T-50 Torx bolts per hinge to remove the hinge from the door.

Be sure the socket has a good bite to prevent damage to the bolt.



**STEP 3**

Align the new hinge on the door. Install the (2) M8x20mm Allen bolts through the hinge into the door. Do this for each hinge.

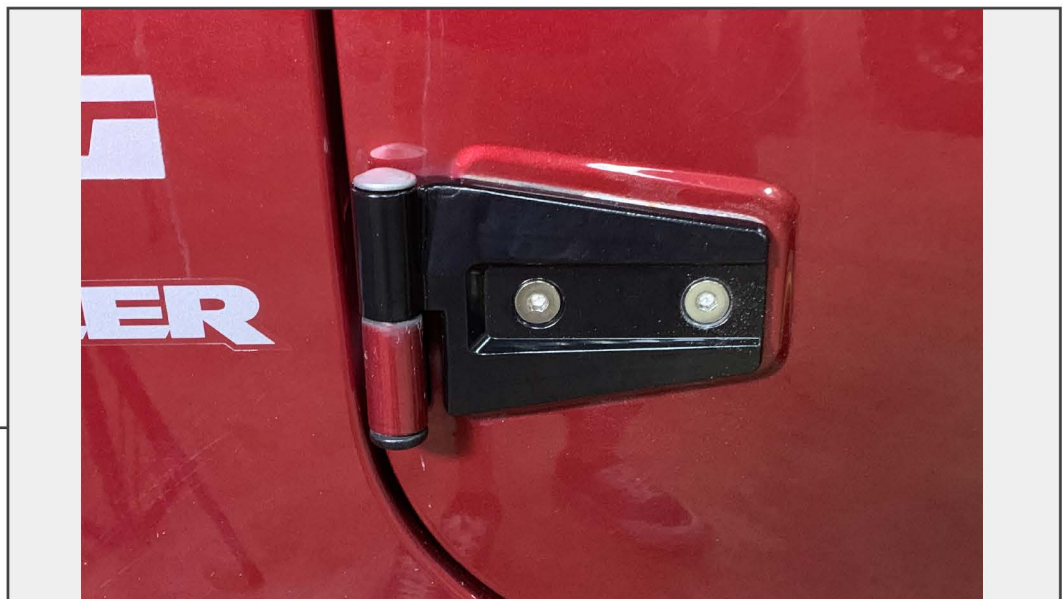

**STEP 4**

Reinstall door on vehicle. Close door gently to be sure alignment is correct. Repeat procedure for all remaining doors.

Installation is now complete.