



REPLACEMENT DOOR HINGE KIT

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS


(4) Door Hinges
(8) M8x20mm Allen Bolts

TOOLS REQUIRED

T-50 Torx Socket
5mm Allen Socket
Ratchet

SKU # J141415

STEP 1

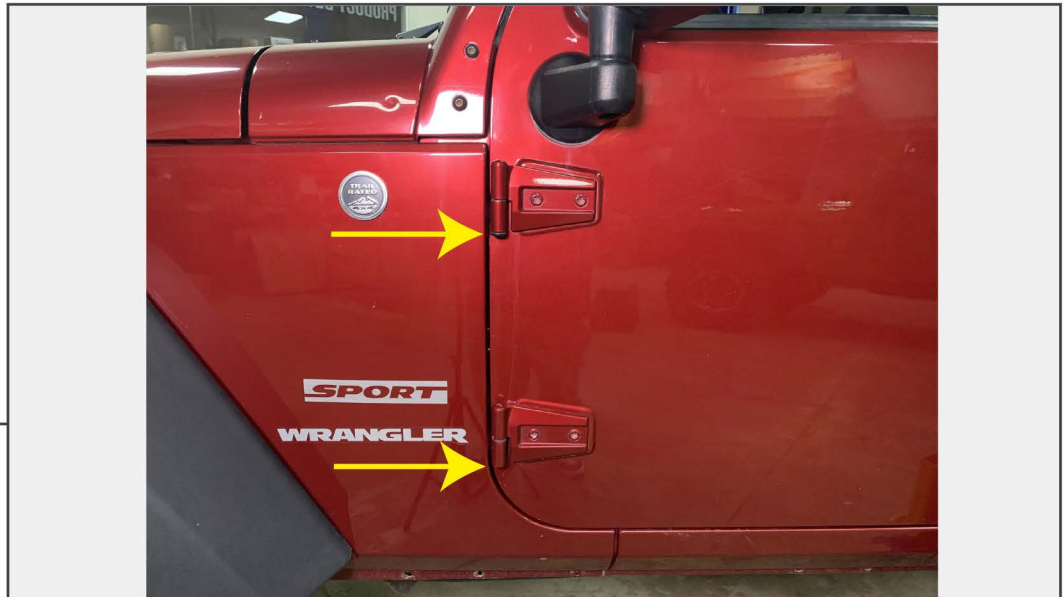

Remove door from vehicle by removing (2) T-50 Torx nuts from the bottom of the hinge. Unplug the door connector and release the limiting strap. Lift door away from vehicle.

STEP 2




Remove (2) T-50 Torx bolts per hinge to remove the hinge from the door.

Be sure the socket has a good bite to prevent damage to the bolt.



STEP 3

Align the new hinge on the door. Install the (2) M8x20mm Allen bolts through the hinge into the door. Do this for each hinge.

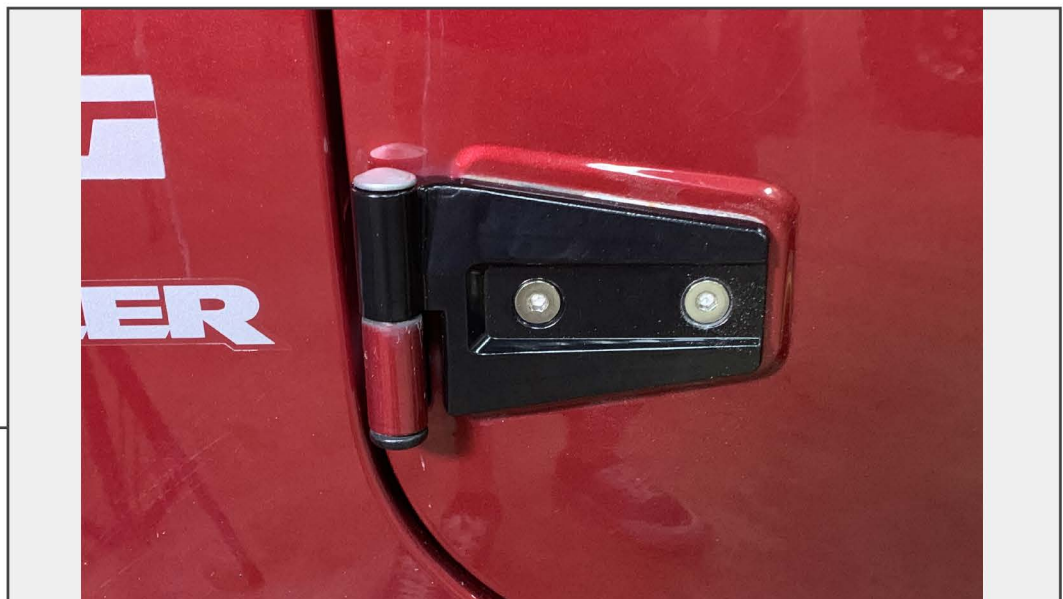

STEP 4

Reinstall door on vehicle. Close door gently to be sure alignment is correct. Repeat procedure for all remaining doors.

Installation is now complete.