



# SPARE TIRE CARRIER TAILGATE BRACKET

(1997-2006 WRANGLER TJ)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Tire Carrier
- (1) "L" Bracket
- (3) M10 Allen Bolts
- (3) M10 Flat Washers
- (3) M10 Lock Washers
- (3) M10 Lock Nuts
- (3) 19mm Lug Nuts


### TOOLS REQUIRED

---

- 1/2" Socket
- 19mm Socket
- 17mm Wrench
- 6mm Allen Socket
- Socket Wrench
- Exterior Detailer

SKU # J141593

**STEP 1**

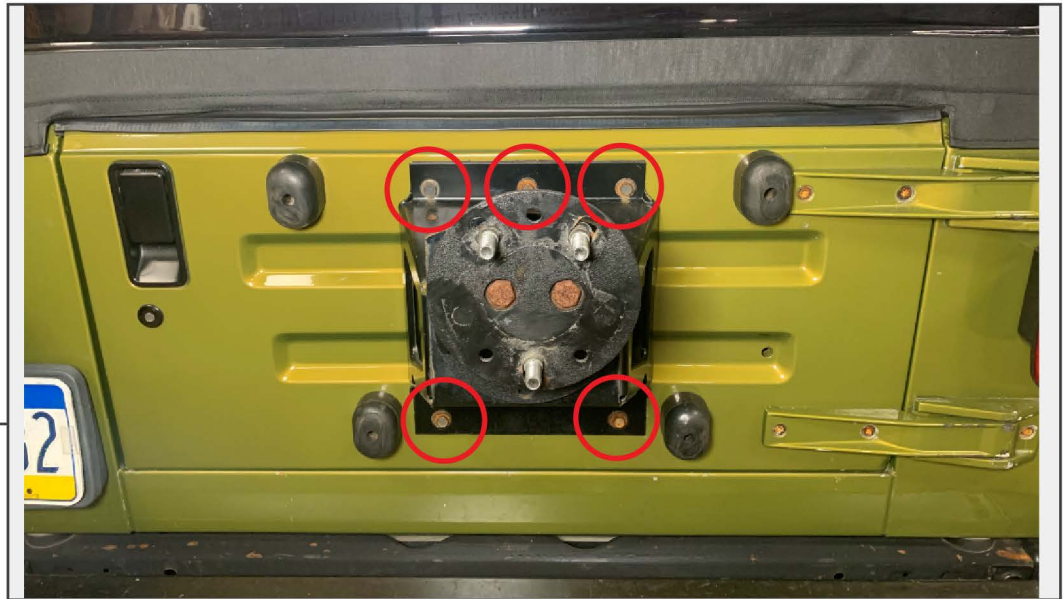

Remove spare tire from original tire carrier, then remove the (5) 1/2" bolts from the tailgate.

**STEP 2**



Clean the tailgate of any dirt and debris using exterior detailer.

**STEP 3**



Using (3) provided M10 allen bolts, lock washers, flat washers, and lock nuts, install the “L” Bracket onto the tire carrier using a 6mm Allen Socket and a 17mm wrench.

**STEP 4**



Reusing (5) original 1/2” bolts, reinstall the tire carrier assembly onto the tailgate.



---

**STEP 5**

Using the (3) provided lug nuts, secure the wheel to the tire carrier. Torque to 100ft/lbs.

Installation is now complete.