



THANOS FRONT FENDER FLARES WITH DRL

(2018-2020 WRANGLER JL)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Front Flares
- (2) Fender Liners
- (2) Turn Signal & Day Time Running Lights
- (2) Small Smoked Side Markers
- (6) Metal Fender Flare Support Brackets
- (4) M3 Self-Tapping Screws
- (6) Hexagonal Screws & Clips
- (2) Fender Flare Supports
- (11) M6 Plastic Clips
- (20) M8 Plastic Clips
- (24) Rubber Grommets
- (24) Fender Clips

TOOLS REQUIRED

- 8mm, 10mm Sockets
- T25, T30 Torx Sockets
- Socket Wrench
- Panel Removal Tool
- Wire Cutters
- Zip-Ties

SKU # J143257

STEP 1



Remove (4) 10mm bolts inside the fender well.

STEP 2



Remove the (3) push clips from the fender liner using a panel removal tool.

STEP 3



Using pliers, depress the white fender clips while pulling the fender away from the vehicle. Start at the bottom of the fender closest to the doors and work your way forward.

STEP 4




Once the fender is halfway off, unplug the electrical connector. Slide the red safety connector out, then press in the tab to separate the connection. Pull the fender the rest of the way off.



STEP 5

Reinstall trim after having fender flare paint matched to your vehicle.

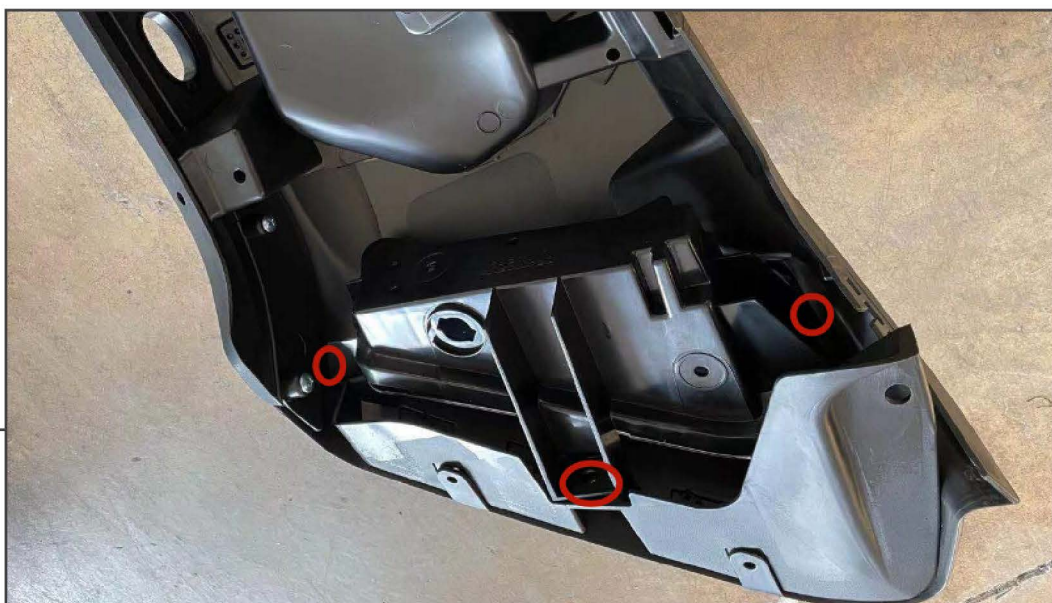

STEP 6

Install the turn signals and day time running lights using the 6 bolts and clips.

STEP 7




Install the smoked side marker lights using the provided self tapping screws.

STEP 8



Install the fender flare supports on the bottom of the fender flares using the M8 plastic clips.

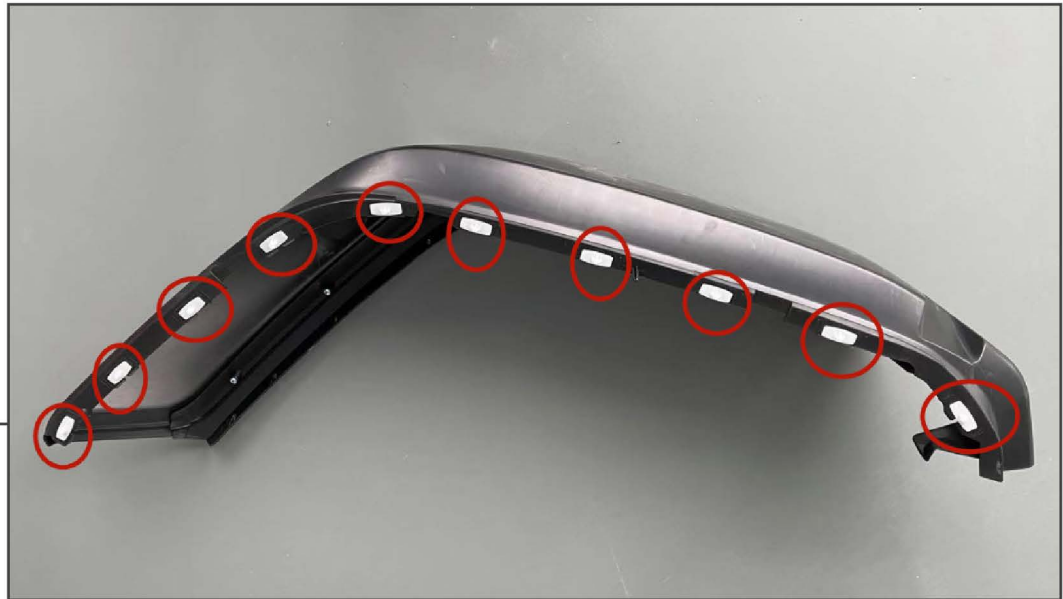

STEP 9

Install the provide fender clips.



STEP 10

Press the fender flares onto the vehicle. Place (1) metal fender support between the fender and the vehicle(purple circle). Place (2) metal fender supports between the fender and the vehicle(green circle).



STEP 11

Connect new lights to the original wiring connector. Install provided fender liner using included clips and original hardware.



STEP 12

Installation is now complete.