



3-PIECE TAILGATE PLUG KIT

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS


(2) Small Rubber Grommets
(1) Large Rubber Grommet

TOOLS REQUIRED

13mm Socket
Ratchet
Plastic Pry Tool

SKU # J150573

STEP 1

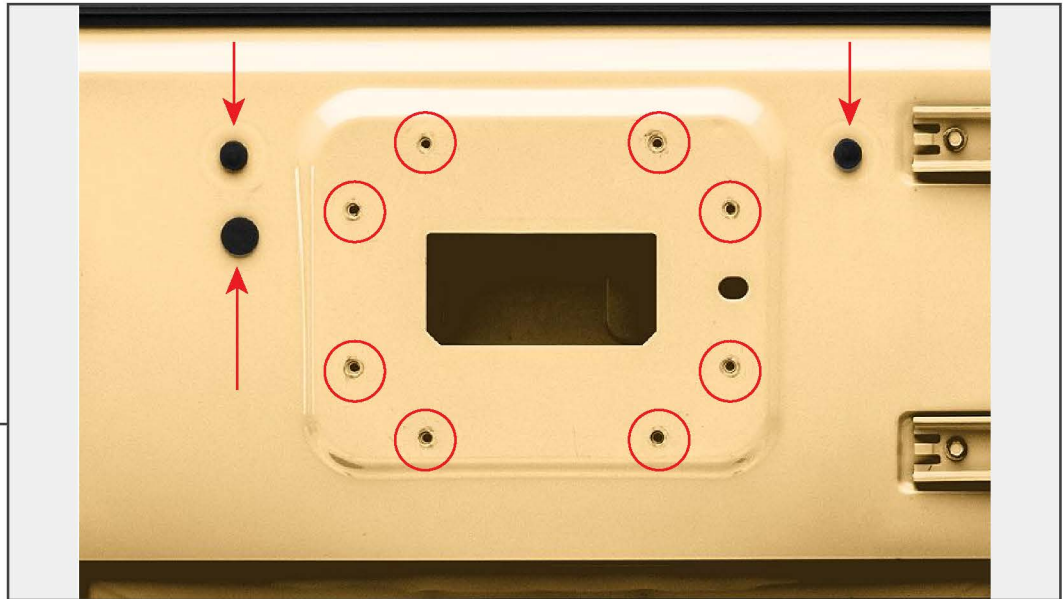

Unplug the tire carrier wiring harness from inside the tailgate, and pull the wiring harness through to the outside of the tailgate. Then, remove the spare tire carrier by removing (8) 13mm bolts, if necessary.

Remove the (2) spare tire rubber bumpers.

STEP 2



Install the (2) small tailgate plugs into the spare tire rubber bumper holes. Install the (1) large tailgate plug into the wiring harness hole.

Installation is now complete.