



# ALUMINUM FRONT INNER FENDERS

(2007-2018 WRANGLER JK)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Inner Fender
- (1) RH Inner Fender
- (2) “L” Brackets
- (12) M6 x 1.00 Allen Head Bolts
- (12) M6 Lock Washers
- (12) M6 Flat Washers
- (6) Clip Nuts
- (1) Allen Wrench

### TOOLS REQUIRED

---

- 10mm Socket
- Ratchet
- Power Drill
- 1/8” & 3/8” Drill Bits
- Permanent Marker
- Tin Snips/Cutting Tool

SKU # J157737



## STEP 1


Remove (2) 10mm bolts and (4) plastic push clips from the original inner fender liner.



## STEP 2

Remove (1) 10mm bolt and insert the (1) "L" bracket. Loosely re-install the original (1) 10mm bolt. Slide (1) clip nut onto the vehicle at the designated location.

## STEP 3

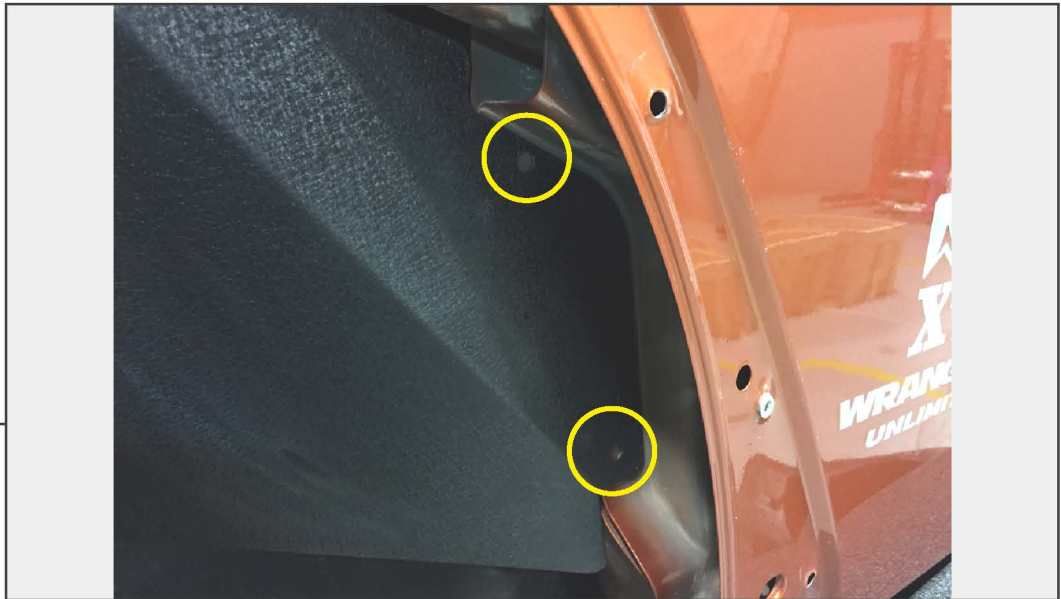

Loosely install the inner fender liner using (6) Allen bolts. Using a permanent marker, mark the hole locations on the rear most holes. Once indicated, remove the fender liner. Tighten the front “L” bracket.

## STEP 4



Drill the previously marked holes to 1/8” as a pilot hole, then drill the holes to 3/8”. Install the supplied clip nuts into the drilled holes.

**Note:** Trimming the inner fender lip may be necessary to install clip nuts.



## STEP 5

Install the fender liner using (6) M6 Allen bolts, (6) M6 lock washers, (6) M6 flat washers, and (6) M6 clip nuts. Repeat steps 1-5 to the opposite side of the vehicle.

Installation is now complete.