

TAILGATE MOUNTED FLAG & ANTENNA HOLDER

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Flag Pole
- (2) Tailgate Hinge Brackets
- (2) Threaded Blocks
- (2) Flag Pole Mounts
- (1) Antenna Mount
- (2) M10x1.50 x 20mm Allen Bolts
- (2) M10 Flat Washers
- (2) M10x1.50 x 12mm Allen Bolts
- (4) M3 Allen Bolts

TOOLS REQUIRED

2.5mm, 6mm, 8mm Allen Keys/Sockets 13mm Socket Ratchet Panel Removal Tool

> SKU # J165069 Edited: 02/08/2022





Remove the inner hinge covers from the tailgate using a plastic panel removal tool.



STEP 2

Remove (2) 13mm bolts from the tailgate hinges.





Place the (2) threaded blocks within the tailgate hinge and secure using the original (2) 13mm bolts.




Install the included (2) tailgate hinge brackets to the tailgate hinges using (2) M10 x 20mm Allen bolts and (2) M10 flat washers. Tighten until secure.





Install the flag pole mounts and the flag pole to the vehicle together, and tighten the mounts to the tailgate hinge brackets using (2) M10 x 12mm Allen bolts.

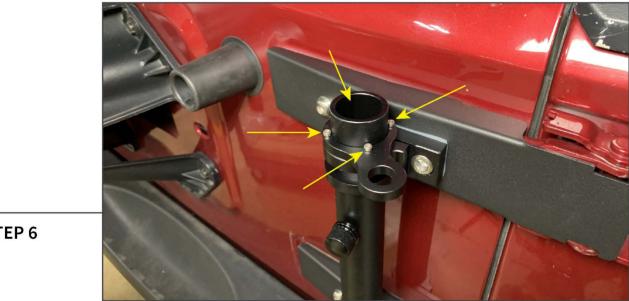

STEP 6

Mount the antenna mount to the upper flag pole retainer using (4) M3 Allen bolts. Tighten until secure.





Ensure flag pole clamps and all mounting hardware is tight.

Installation is now complete.