



OLD GLORY SPARE TIRE DELETE

(1997-2006 WRANGLER TJ)


INSTALLATION INSTRUCTIONS

CONTENTS

(1) Spare Tire Delete Panel

TOOLS REQUIRED

1/2" Socket
Ratchet

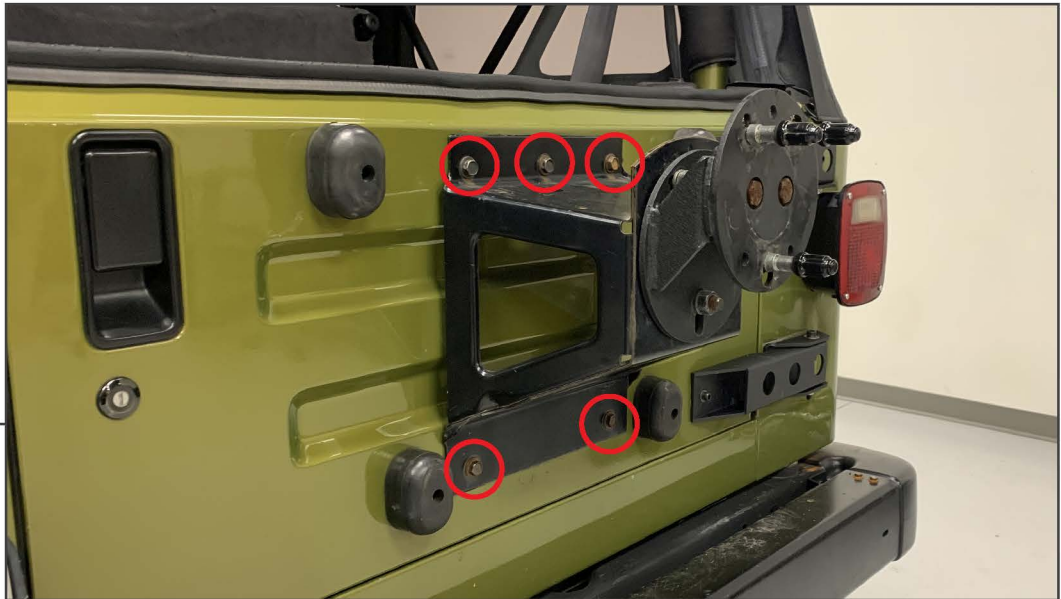

STEP 1

Remove the spare tire from the vehicle. Remove (5) 1/2" bolts from the spare tire carrier, and remove the tire carrier from the vehicle.

Note: Original hardware will be reused.



STEP 2

Place the spare tire delete panel to the vehicle. Secure the panel using the (5) original 1/2" bolts. Tighten until secure.

Installation is now complete.