



# TAILGATE CB ANTENNA MOUNT

(1997-2006 WRANGLER TJ)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Antenna Mount
- (1) M8 x 1.25 x 20mm Allen Bolt
- (1) M8 Lock Washer
- (1) M8 Flat Washer
- (1) M8 Riv-Nut

### TOOLS REQUIRED


---

- 4mm Allen Key/Socket
- Phillips Screwdriver
- 1/2" Socket
- Ratchet



**STEP 1**

Remove (4) Phillips screws from the RH side tail light lens.

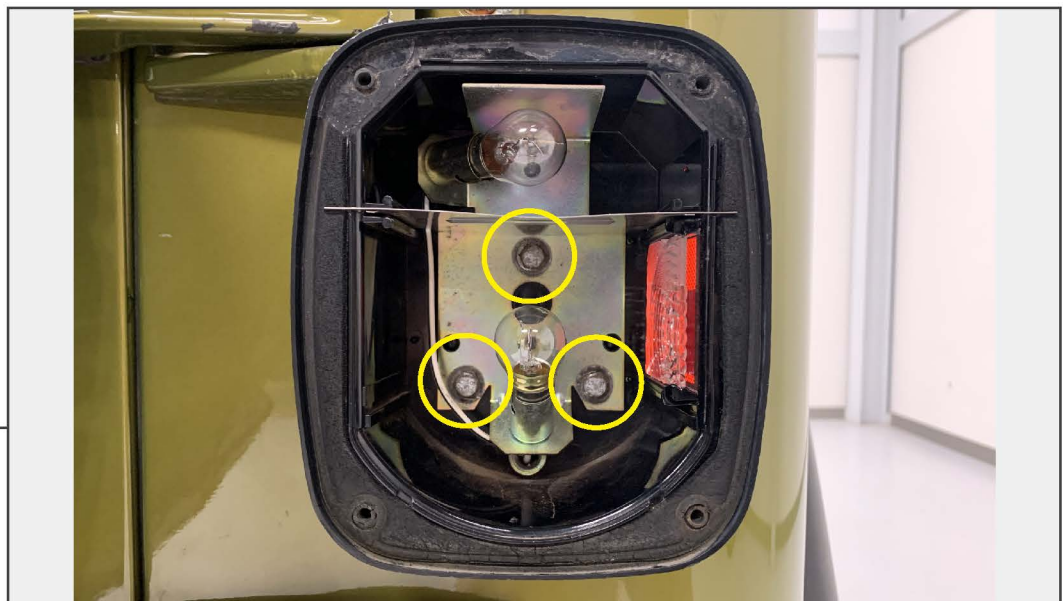

**STEP 2**

Remove the (3) 1/2" bolts securing the tail light to the vehicle.



**STEP 3**

Place the CB antenna mount onto the backside of the tail light. Secure the tail light to the vehicle reusing the original hardware.



**STEP 4**

Optional Drilling: Using the pre-drilled hole as a template, drill into the body and install the provided riv-nut. Secure the top of the bracket to the vehicle using the provided hardware.



---

**STEP 5**

Re-install the lens to the tail light reusing the original hardware.

Installation is now complete.