



TAILGATE CB ANTENNA MOUNT

(2018-2022 WRANGLER JL)


INSTALLATION INSTRUCTIONS

CONTENTS

(1) CB Antenna Mount Bracket


TOOLS REQUIRED

13mm Socket
Ratchet

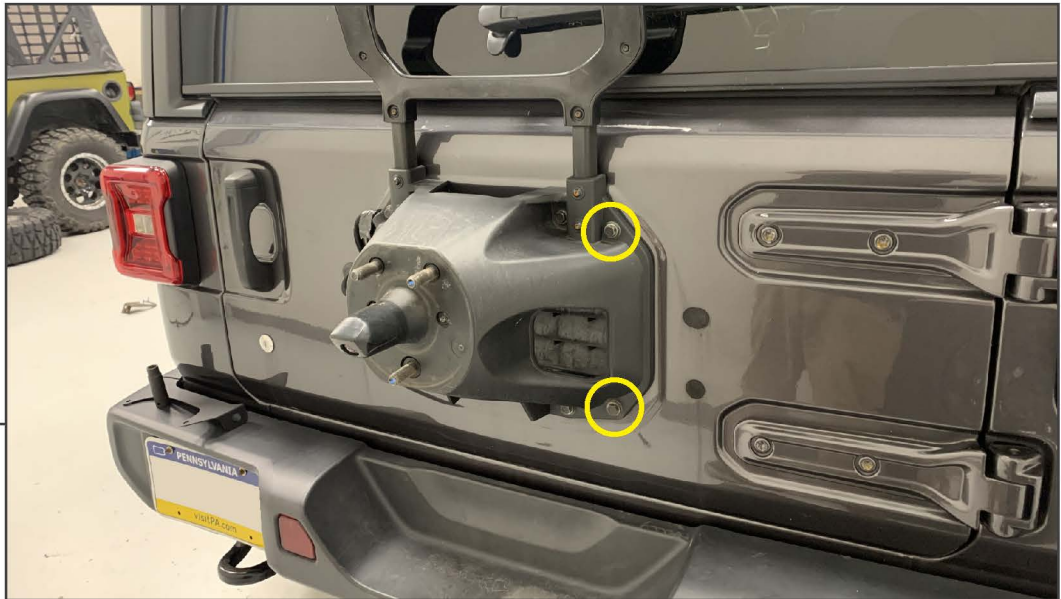

STEP 1

Remove the spare tire from the vehicle. Locate and remove the (2) spare tire carrier bolts.

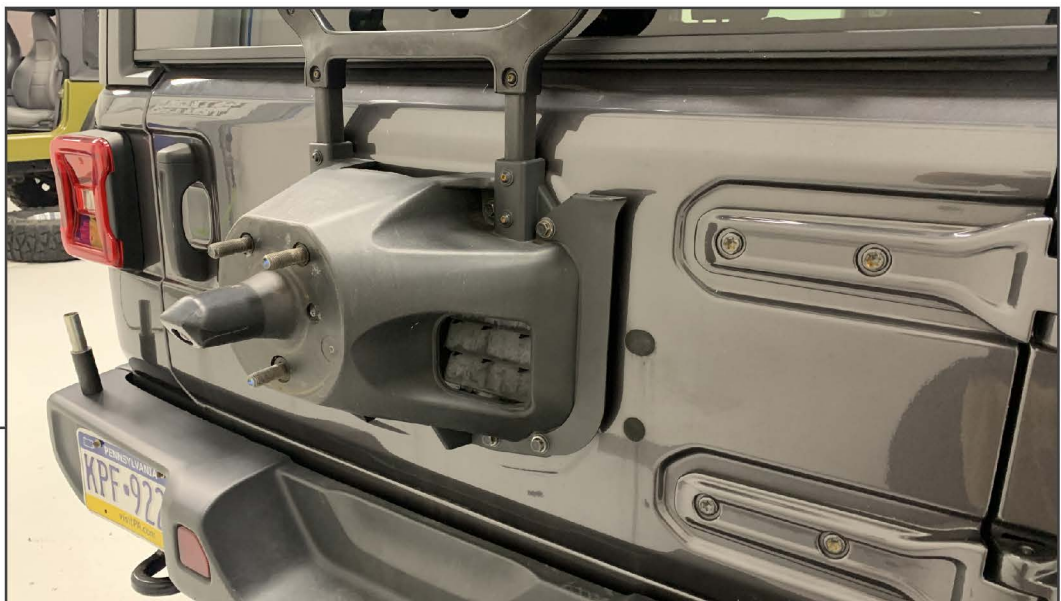

STEP 2

Align the antenna mounting bracket to the previously removed bolt locations. Using the original hardware, secure the antenna mounting bracket to the vehicle. Re-install the spare tire to the vehicle

Installation is now complete.