
REDROCK

Tailgate Table

J166368-JL

(1)Contents:

2018+ WRANGLER JL

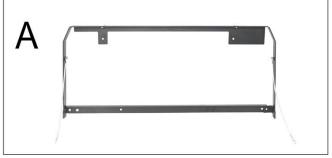





(2)Tools required:

- A. 10mm Wrench
- **B.** 4mm HEX Socket

Wrench (or Allen Wrench)

- C. Drill
- D. 12mm Drill Bit



(3) Installation time:

About 1 hour, 1-2 people may be needed. Installation time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

(4)Installation instruction:

Step 1:


Remove the cover plate.



Step 2:

Drill 4 12mm bolt holes. The figure shows where to drill it. According to the size of the holes use the Part "C".



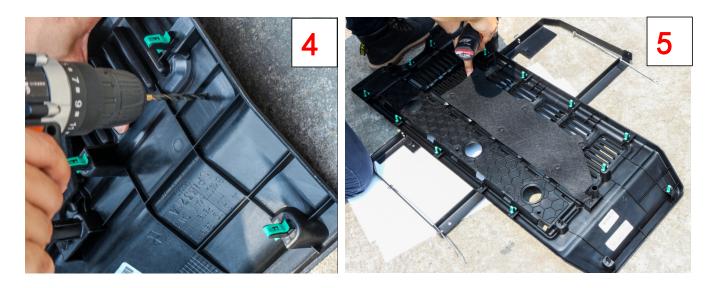

Step 3:After "Step 2",then as shown below.





Step 4:

Assemble the PART "A" & PART "B" with PART "G" & PART "H", and then install it on the tailgate with the PART "E", PART "K" & PART "J".





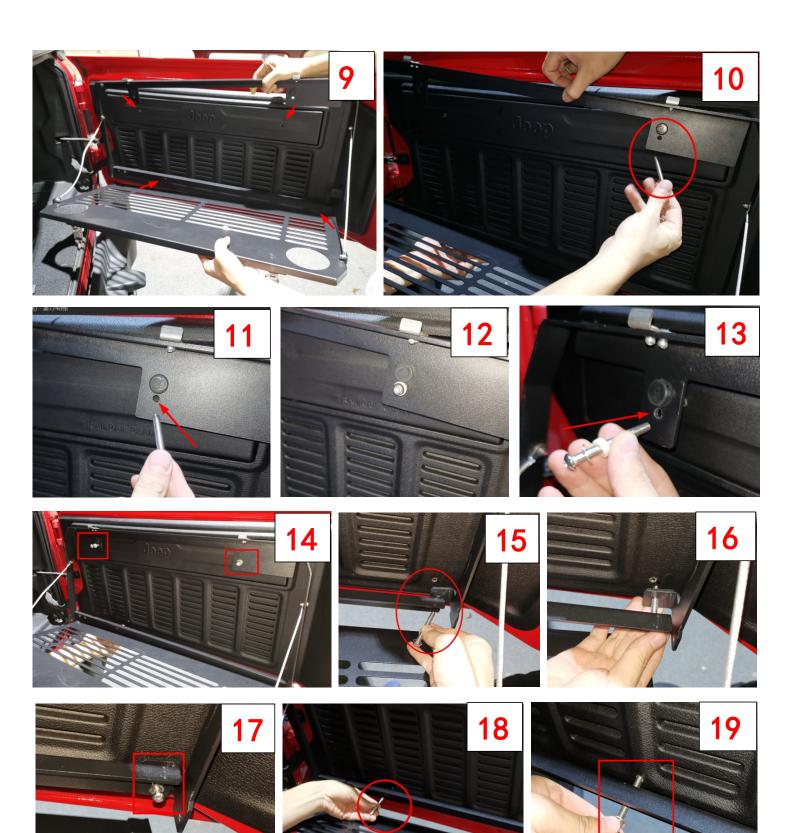

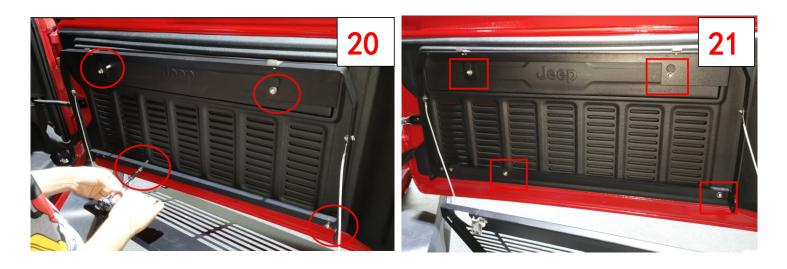

Step 5:

Assemble the PART "A" & "B" using PART "F", "D" and "I".



Step 6:

Installation completed.

