



ROLL-UP SUNROOF FOR OE HARDTOP

(2018-2023+ WRANGLER JL)
(2020-2023+ GLADIATOR JT)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Roll-Up Sunroof
- (1) Left Side Bracket
- (1) Right Side Bracket
- (4) Long Thumb Screws
- (2) Short Thumb Screws
- (2) Female Threaded Knobs
- (2) M8 Bolts


TOOLS REQUIRED

N/A

SKU # J167198

STEP 1

Begin by unrolling the cover. Place the metal frame on top of the cover. Starting at the rear of the cover, tuck the frame into the cover pocket and button the cover to the frame. Secure into place using the pre-installed snaps.

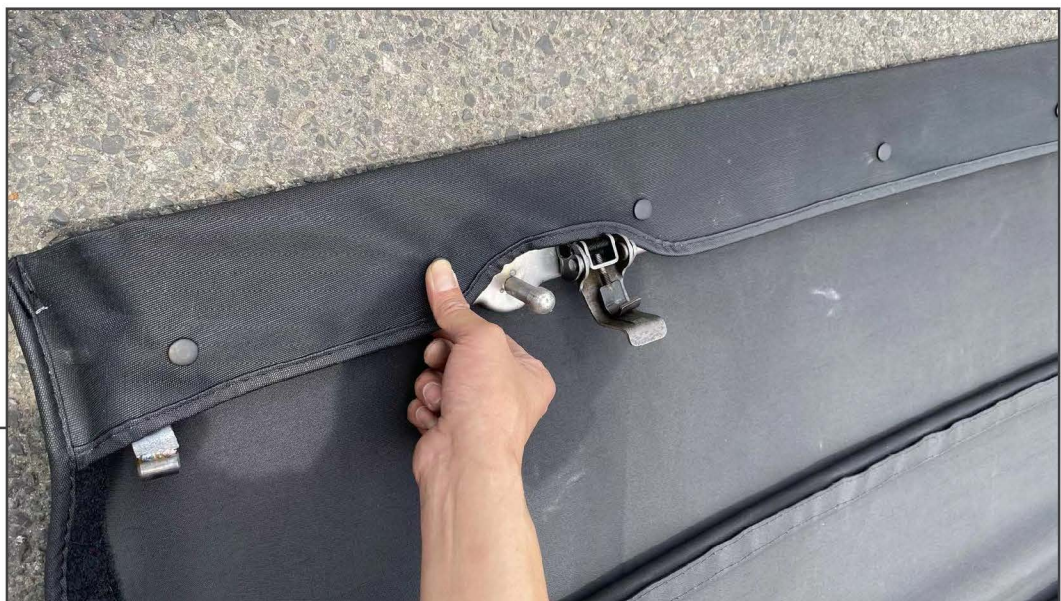STEP 2


Tuck the front frame into the cover pocket and button the cover to the frame. Secure into place using the pre-installed snaps.

Fit the center bow into the sleeve in the center of the sunroof. Ensure the ends are fitted into the plastic fittings.



STEP 3

Unlock the factory freedom panels and remove the panels from the vehicle.

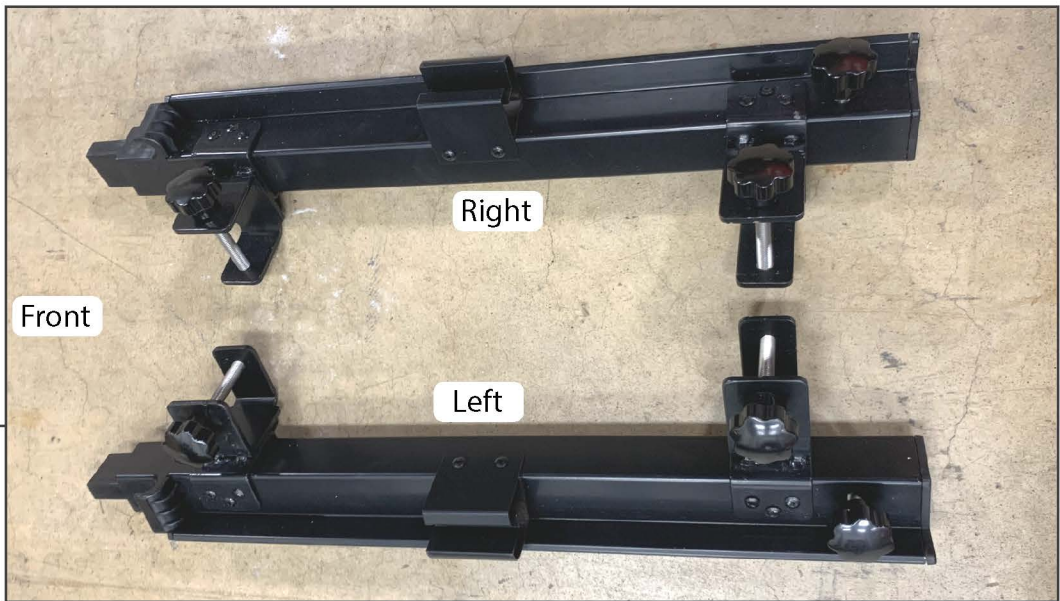

STEP 4

Identify the left (driver side) and right (passenger side) sunroof brackets. Loosen and remove the thumb screws.

**STEP 5**

Install the sunroof brackets to the vehicle roll bars. Use the long thumb screws removed in step 2, align the brackets with the holes in the factory roll bar. Carefully align the thumb screw and secure the brackets to the vehicle. Repeat this on both sides.

Note: Gently manipulate the bracket's position on the roll bar to allow the bolt holes to properly align and allow the thumb screws to thread.

**STEP 6**

Loosen and remove the female threaded knobs from the rear of the sunroof panel.

Note: Ensure the (2) pre-installed M8 bolts are fully tightened down.

**STEP 7**

Place the sunroof assembly onto the vehicle hardtop. Ensure to overlap the sunroof over the hardtop freedom panel gasket to ensure proper fitment. Fit the pre-installed M8 bolts through the freedom panel mount holes.

Using the female threaded knobs secure the middle of the sunroof to the vehicle hardtop. Then, secure the sunroof to the side brackets using the provide small thumb screws.

**STEP 8**

Roll the sunroof forward, ensure the locating pins engage with the hooks on the front of the side brackets.

Ensure the center bow is within the track in the middle of the side rails, if the center bow is mis-aligned, the sunroof will not un-roll properly.

**STEP 9**

Open the sunroof latches. Fit the hook under the freedom panel header brackets.

**STEP 10**

Align the locating pins to the factory header receiver and close the latches on both sides to secure the sunroof.

Note: The initial install may require additional downward pressure to allow the latches to secure to the header. Over time with sun exposure and material stretching, this will become easier.

**STEP 11**

To open the sunroof, unlatch the latches and roll the sunroof backwards. Use the Velcro straps to secure the sunroof in the open position, place the plastic clip through the top loophole and pull the strap tight.

Secure the straps to the Velcro attached to the inside of the sunroof when the sunroof is closed.

**STEP 12**

Installation is now complete.