



FOOT RESTS

(2018-2023 WRANGLER JL)
(2020-2023 GLADIATOR JT)

INSTALLATION INSTRUCTIONS


CONTENTS

(2) Foot Rests
(2) M10x1.50 x 60mm Allen Bolts
(2) M10 Lock Nuts

TOOLS REQUIRED

8mm Allen Key
17mm Wrench
T-40 Torx Socket
T-50 Torx Socket
Ratchet

STEP 1

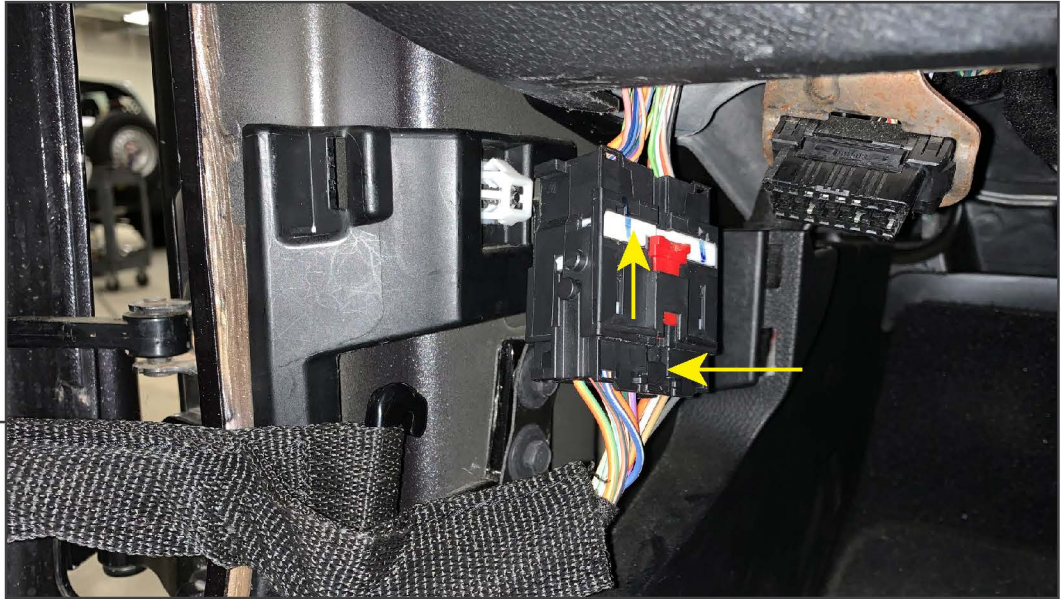

Remove the interior door wiring trim panel. Unplug the door wiring harness by sliding the red lock upwards, then pressing the black tab while separating the connectors.

STEP 2



Remove (1) T-40 Torx bolt from the door limiter.

STEP 3



Remove (2) T-50 Torx nuts from the door hinges on the outside of the vehicle.

STEP 4



Designate a soft surface for the door. Then, carefully lift the door from the hinges and set on a soft surface when not in use.

Fit the foot rest to the vehicle hinge, and secure into place using (1) M10 x 60mm Allen bolt and (1) M10 lock nut. Tighten the hardware until the foot rest is secure.



STEP 5

Repeat steps 1-4 to install the remaining door hinge foot rest.

Installation is now complete.