


REDROCK 4X4

Front Mud Guard Installation Instructions 2009-2018 1500 - WITH OEM FENDER FLARES

Contents
(1) LH Mud Guard
(1) RH Mud Guard
(2) Phillips Screws
(2) Screw Clips

Tools Required
8mm Socket
Ratchet
Phillips Screwdriver (Optional)
1/8" Drill Bit (Optional)
Drill (Optional)

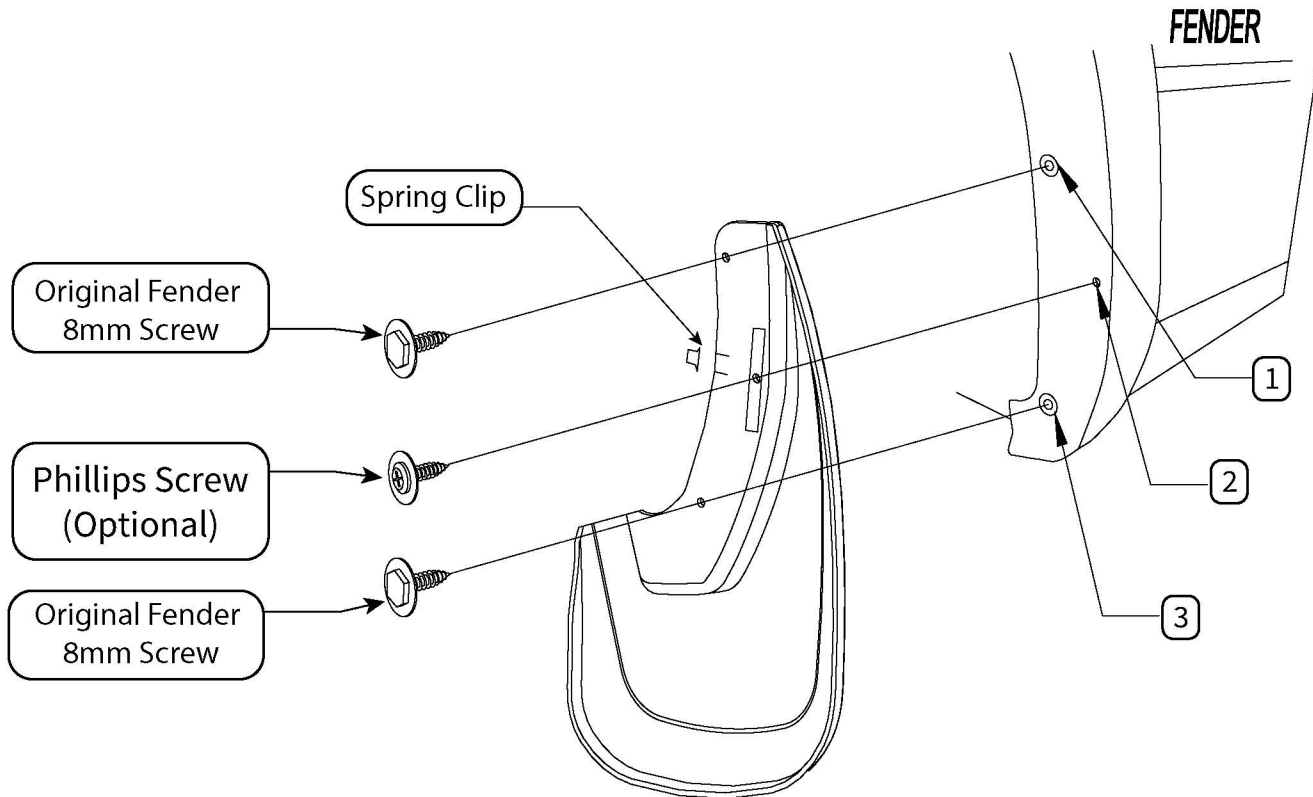

1. Thoroughly clean and dry the vehicle in preparation of mud guard installation.
2. Remove the original vehicle fender 8mm screws (see diagram, # 1 & 3).
3. Peel red tape backing from the pre-installed adhesive on the mud guard.
4. Align the mud guard to the vehicle, and secure into place reusing the (2) original fender 8mm screws.
5. Secure the side of the mud guard to the vehicle using (1) spring clip at the indicated location (see diagram, "Spring Clip").

OPTIONAL INSTALLATION


1. Using the mud guard as a template, drill (1) 1/8" hole through the fender liner (see diagram, # 2)
2. Using (1) Phillips screw, secure the mud guard to the fender lip.

REDROCK^{4X4}

Rear Mud Guard Installation Instructions 2009-2018 1500 - WITH OEM FENDER FLARES

Contents
(1) LH Mud Guard
(1) RH Mud Guard
(2) Phillips Screws
(2) Screw Clips

Tools Required
8mm Socket
Ratchet
Phillips Screwdriver (Optional)
1/8" Drill Bit (Optional)
Drill (Optional)

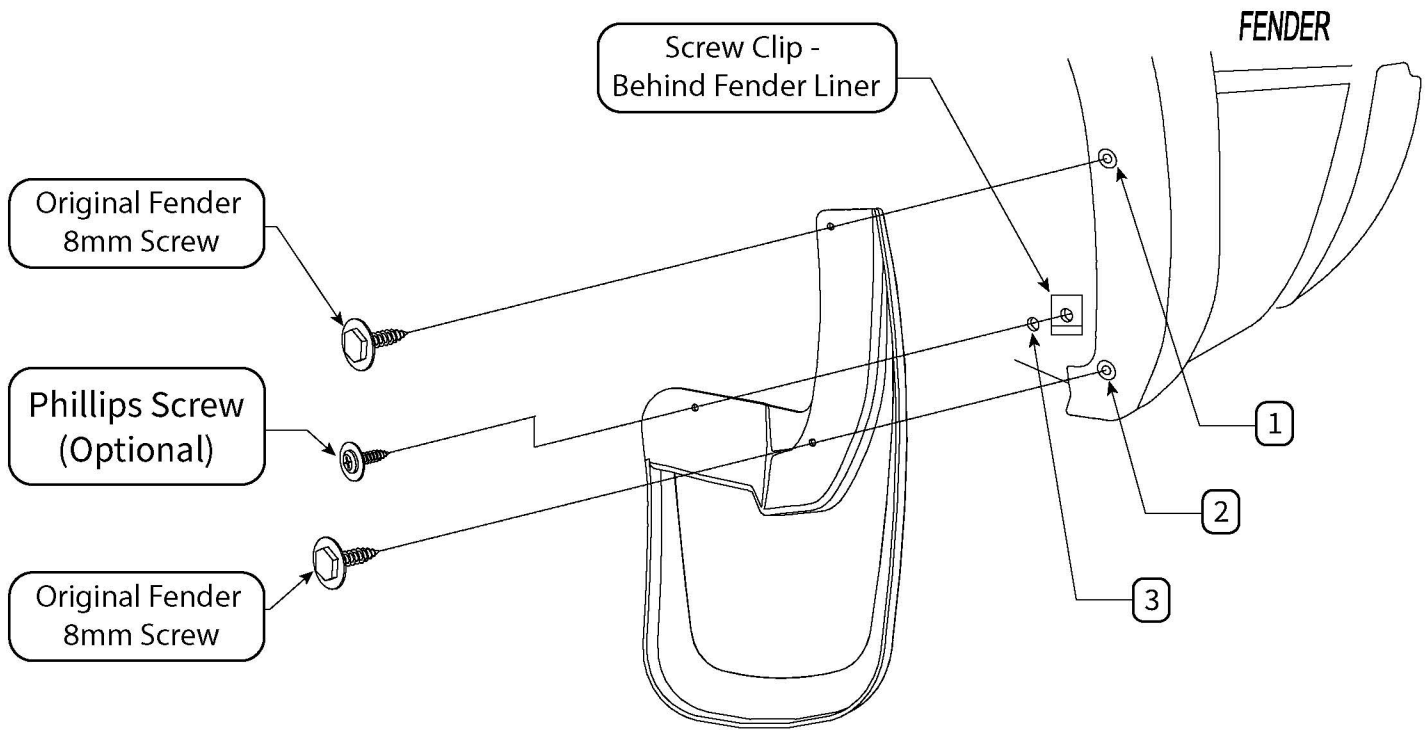

1. Thoroughly clean and dry the vehicle in preparation of mud guard installation.
2. Remove the original vehicle fender 8mm screws (see diagram, # 1 & 2).
3. Align the mud guard to the vehicle, and secure into place reusing the (2) original fender 8mm screws.

OPTIONAL INSTALLATION

1. Using the mud guard as a template, drill (1) 1/8" hole through the fender liner (see diagram, # 3)
2. Using (1) Phillips screw and (1) screw clip, secure the mud guard to the fender liner.