


REDROCK^{4x4}

Front Mud Guard Installation Instructions 2019+ 1500 - WITH OEM FENDER FLARES

Contents
(1) LH Mud Guard
(1) RH Mud Guard
(2) Phillips Screws
(2) Screw Clips

Tools Required
Phillips Screwdriver
7/32" Socket
Ratchet
1/8" Drill Bit (Optional)
Drill (Optional)

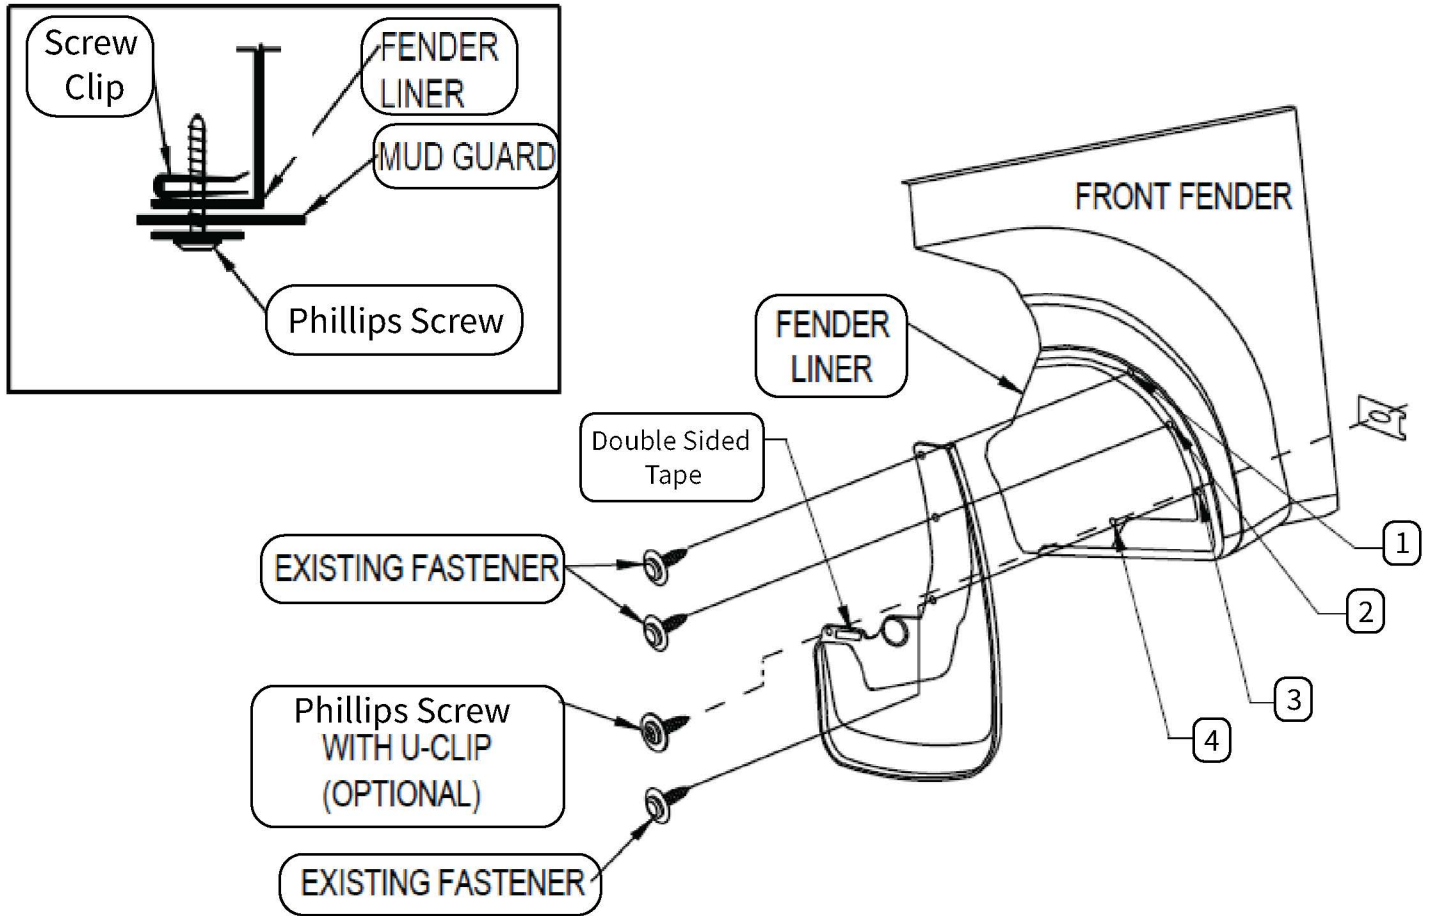

1. Thoroughly clean and dry the vehicle in preparation of mud guard installation.
2. Remove the original vehicle fender hardware (see diagram, # 1, 2, & 3).
3. Peel red tape backing from the pre-installed adhesive on the mud guard.
4. Align the mud guard to the vehicle, and secure into place reusing the (3) original fender screws.

OPTIONAL INSTALLATION


1. Using the mud guard as a template, drill (1) 1/8" hole through the fender liner (see diagram, #4)
2. Using (1) Phillips screw and (1) screw clip, secure the mud guard to the fender liner.

REDROCK^{4X4}

Front Mud Guard Installation Instructions 2019+ 1500 - WITH OEM FENDER FLARES

Contents
(1) LH Mud Guard
(1) RH Mud Guard
(2) Phillips Screws
(2) Screw Clips

Tools Required
Phillips Screwdriver
7/32" Socket
Ratchet
1/8" Drill Bit (Optional)
Drill (Optional)

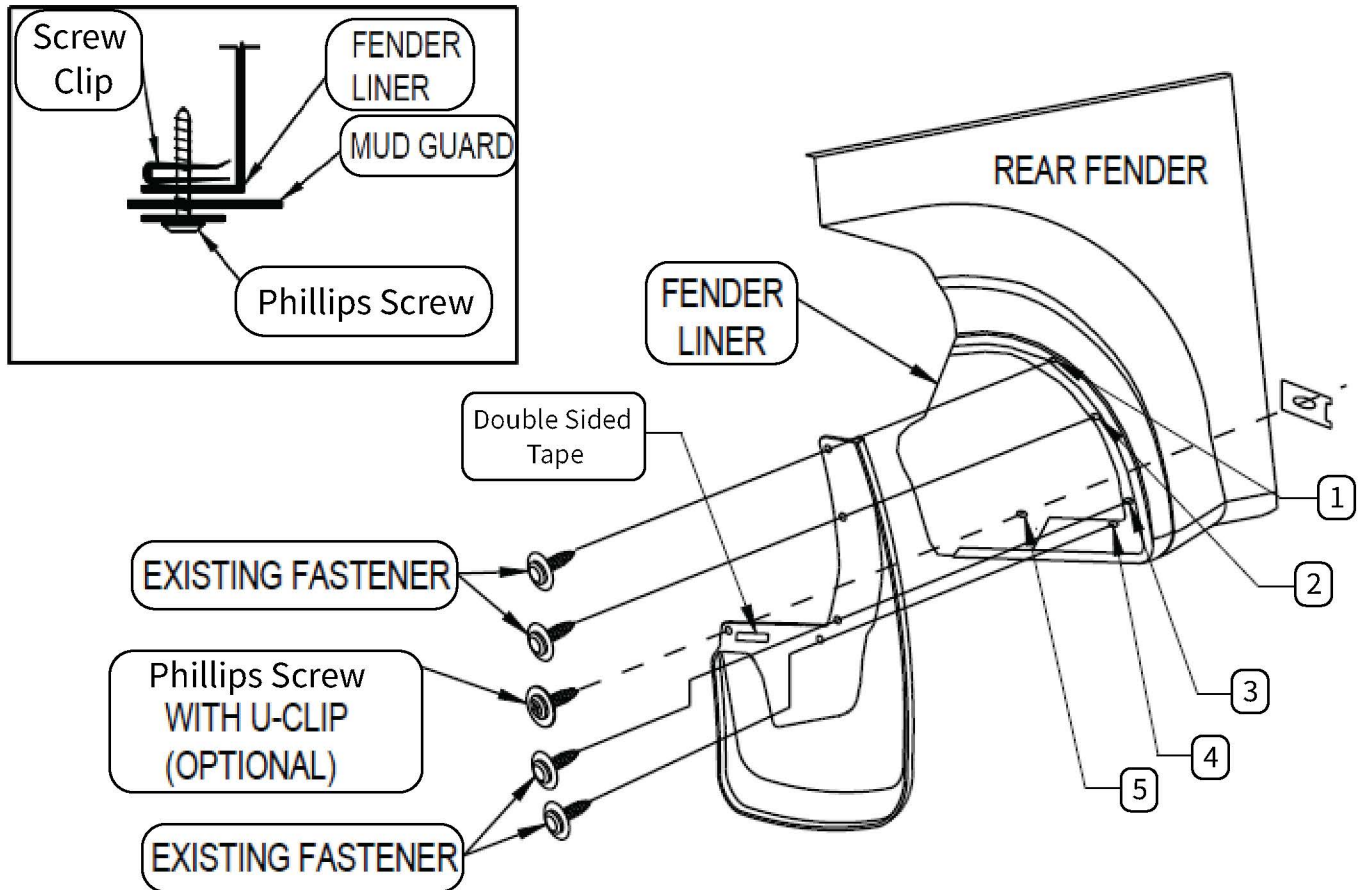

1. Thoroughly clean and dry the vehicle in preparation of mud guard installation.
2. Remove the original vehicle fender hardware (see diagram, # 1, 2, 3, & 4).
3. Peel red tape backing from the pre-installed adhesive on the mud guard.
4. Align the mud guard to the vehicle, and secure into place reusing the (4) original fender screws.

OPTIONAL INSTALLATION

1. Using the mud guard as a template, drill (1) 1/8" hole through the fender liner (see diagram, #5)
2. Using (1) Phillips screw and (1) screw clip, secure the mud guard to the fender liner.