



SOFT QUAD FOLD TONNEAU COVER

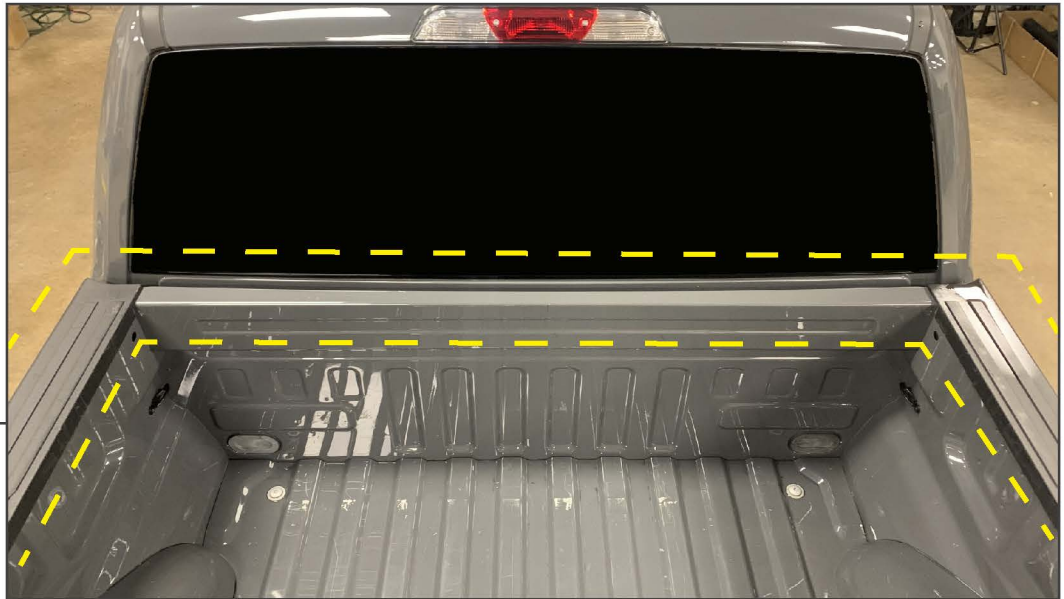
INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Tonneau Cover
- (2) Rear Rails
- (2) Rear Clamp Assemblies
- (2) Middle Clamp Assemblies
- (4) Male Hand Knobs
- (2) Female Hand Knobs
- (2) Front Hook Brackets
- (2) Front Wing Nuts
- (1) Allen Key

TOOLS REQUIRED

- Exterior Detailer
- Microfiber Cloth
- 5mm Allen Key (Provided)

STEP 1

Clean the vehicle bed bulkhead and side rails using exterior detailer and a microfiber to remove any dirt/debris.

STEP 2

Place the tonneau cover onto the front of the vehicle bed. Un-fold the tonneau cover towards the rear of the vehicle, and center the tonneau cover to the vehicle bed. Once centered, gently fold the tonneau cover to the front of the vehicle to begin mounting clamp installation.

STEP 3

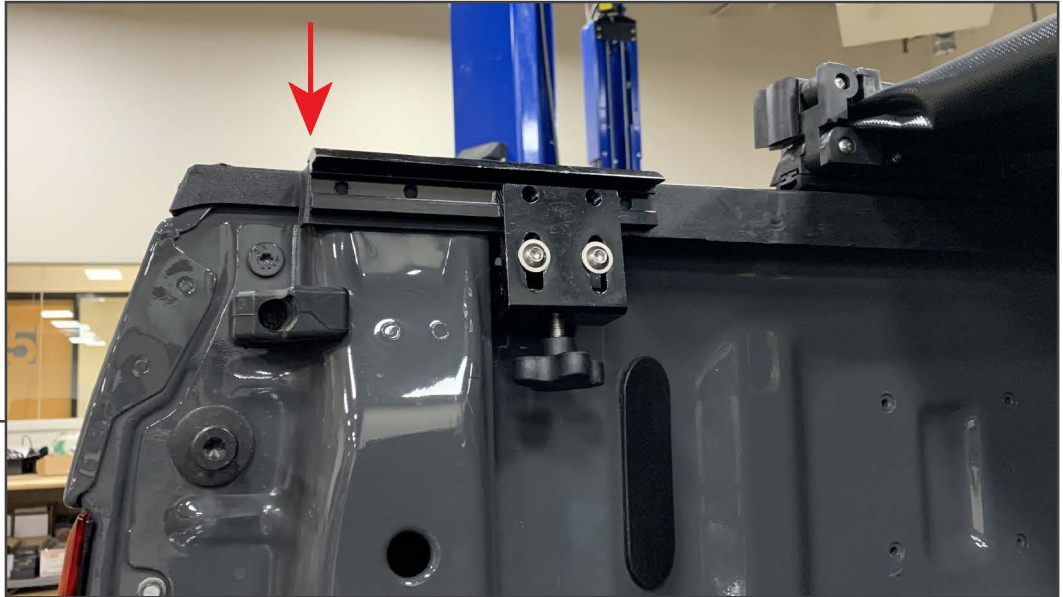
Fold the tonneau cover stud downwards from the tonneau cover frame. Fit (1) front hook bracket to the stud, followed by (1) female hand screw, and then (1) wing nut. Fit the hook bracket to the metal lip of the bed rail. Once hooked to the metal, tighten the hand screw until the clamp is secure. Ensure to tighten both sides together to ensure the tonneau tightens evenly.

Once the hand screw is tight, thread the wing nut upwards to secure the hand screw.

STEP 4

Un-fold the tonneau cover to the 3rd panel to locate the latch location. Once identified, fold the panel upwards and fit the middle clamp assembly to the vehicle bed rail. Tighten the male hand screw upwards to add tension. Tighten the (2) Allen bolts evenly to secure the clamp into place.

The 3rd panel will latch to this clamp assembly.

**STEP 5**

Fit the rear clamp assembly around the bed rail, ensuring the rear of the rail matches to the rear of the bed rail. Tighten the male hand screw upwards to add tension. Tighten the (2) Allen bolts evenly to secure the clamp into place.

The 4th panel will latch to the rear clamp rail.

**STEP 6**

Installation is now complete.