



# MUD FLAPS

(2004-2014 F-150; WITHOUT OEM FENDER FLARES)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Front Pair of Mud Flaps
- (1) Rear Pair of Mud Flaps
- (8) Phillips Screws
- (4) Plastic Push Clips
- (2) M6 x 35mm Bolts
- (2) M6 Flat Washers

### TOOLS REQUIRED

---

- Phillips Screwdriver
- 5.5mm, 10mm Socket
- Panel Removal Tool
- Drill (Optional)
- 5/32" Drill Bit (Optional)
- Permanent Marker (Optional)

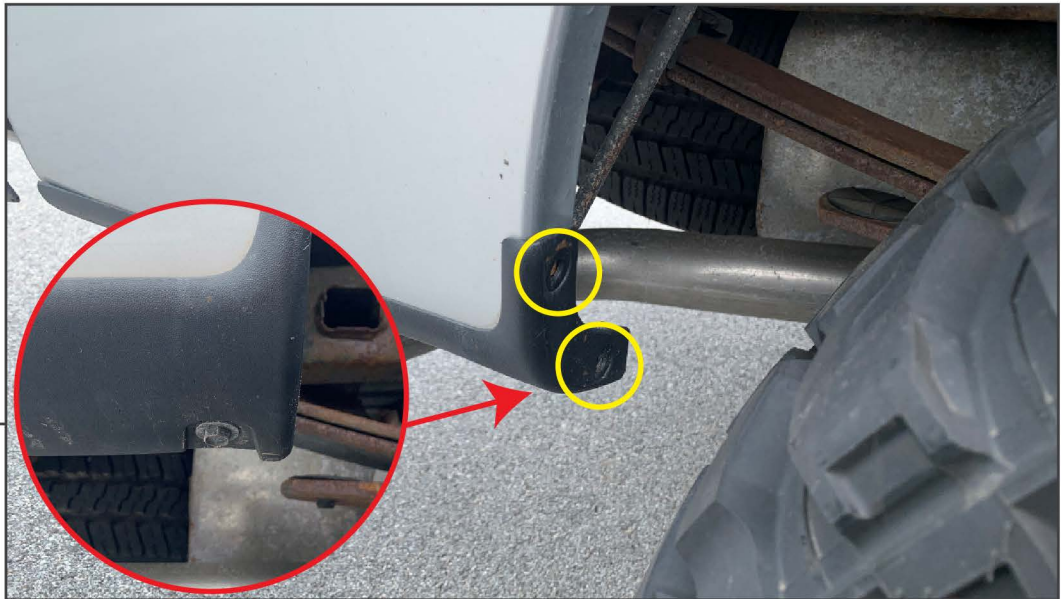
SKU # T554366

**STEP 1  
(FRONT)**

Remove (2) 5.5mm screws from the inner fender trim. Remove (1) plastic push clip from the bottom of the fender. Repeat this procedure to the opposite side.

**STEP 2**

Align the mud flap to the vehicle. Fasten the mud flap to the vehicle re-using original hardware. Install (1) plastic push clip through the mud flap and into the vehicle fender. Repeat this procedure to the opposite side.

**STEP 3  
(REAR)**

Remove (2) inner fender screws from the fender trim. Remove (1) 10mm bolt from the bottom of the fender. Repeat this procedure to the opposite side.

**STEP 4**

Align the mud flap to the vehicle. Fasten the mud flap to the vehicle re-using original hardware. Install (1) M6 x 35mm bolt and (1) M6 flat washer through the mud flap and into the original bolt location at the bottom of the fender. Repeat this procedure to the opposite side.

Optional: Use remaining (8) Phillips screws and (8) screw clips as additional reinforcement for the mud guards. Installation is now complete.