



MOLDED MUD GUARDS

(2015-2020 F-150 - WITH OEM FENDER FLARES)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Mud Guard
- (1) RH Front Mud Guard
- (1) LH Rear Mud Guard
- (1) RH Rear Mud Guard
- (2) Plastic Push Clips
- (8) Phillips Screws
- (2) Screw Clips
- (2) M6 Bolts
- (10) M6 Flat Washers
- (10) Spring Clips

TOOLS REQUIRED

- Phillips Screwdriver
- Panel Removal Tool
- Drill (Optional)
- 1/8" Drill Bit (Optional)

SKU # T576602
Edited: 03/17/2022



**STEP 1
(FRONT)**


Align the mud guard to the vehicle, and secure into place using (3) spring clips at the indicated locations. Ensure the spring clips are attached to the inside of the fender flare and the mud guard.



STEP 2

Optional: Drill the indicated holes in the mud guard and reinforce the mud guard to the flare using the provided (3) Phillips screws and (3) flat washers.

STEP 3 (REAR)

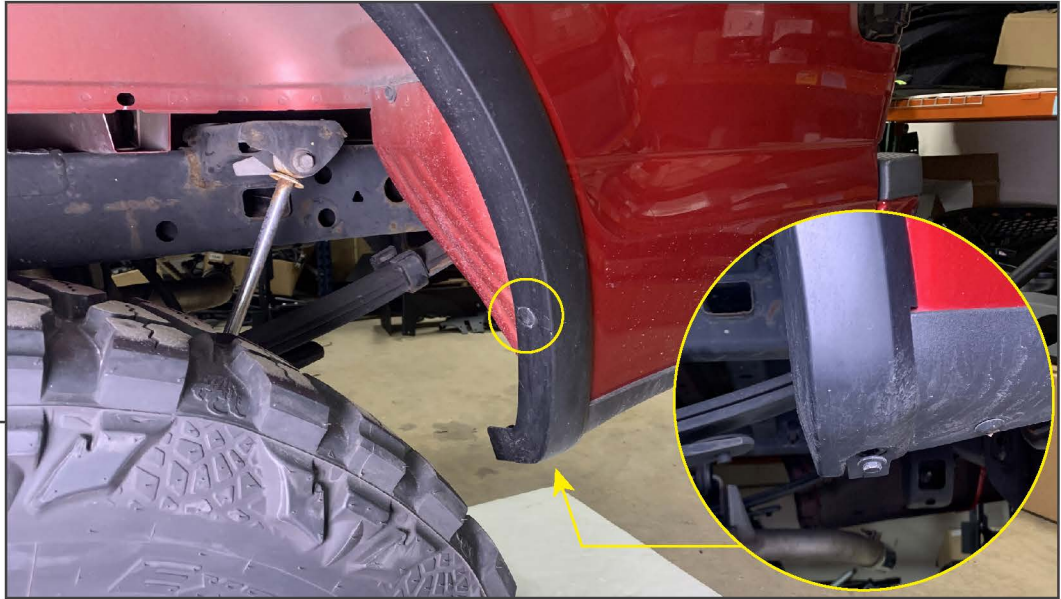

Remove (1) plastic push clip from the fender flare. Remove (1) 10mm bolt from the bottom of the fender flare.

STEP 4



Align the mud guard to the vehicle, and secure to the fender flare using (2) spring clips. Ensure the spring clips are attached to the inside of the fender flare and the mud guard.



STEP 5

Using (1) Phillips screw, (1) flat washer, and (1) screw clip, secure the top of the mud guard to the vehicle. The screw clip will act as a nut while tightening. Secure the bottom of the mud guard using (1) M6 bolt and (1) flat washer.

Repeat steps 1-5 to the opposite side of the vehicle. Installation is now complete.