



# BED SIDE MOLLE PANEL SET

(2005-2015 TACOMA)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---


- (2) Front Panels
- (2) Rear Panels
- (2) Straps
- (6) Utility Rail Threaded Inserts
- (2) Nut Plates
- (6) M10x1.50 x 20mm Allen Bolts
- (6) M10 Lock Washers
- (6) M10 Flat Washers
- (12) M6x1.00 x 20mm Allen Bolts
- (12) M6 Lock Washers
- (12) M6 Flat Washers
- (2) Self Tapping Screws

### TOOLS REQUIRED

---


- 4mm, 6mm Allen Key
- 8mm Socket
- T-30 Torx Socket
- Impact Driver/Drill

SKU # TT21811

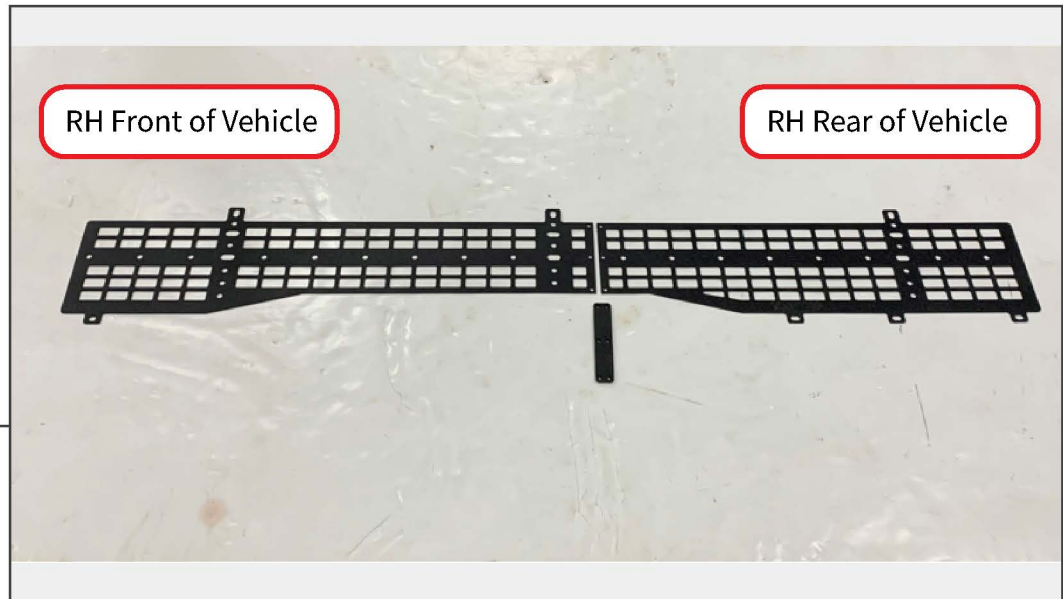

**STEP 1**

Assemble the molle panels using (1) nut plate, (6) M6 x 20mm Allen bolts, (6) M6 lock washers, and (6) M6 flat washers.

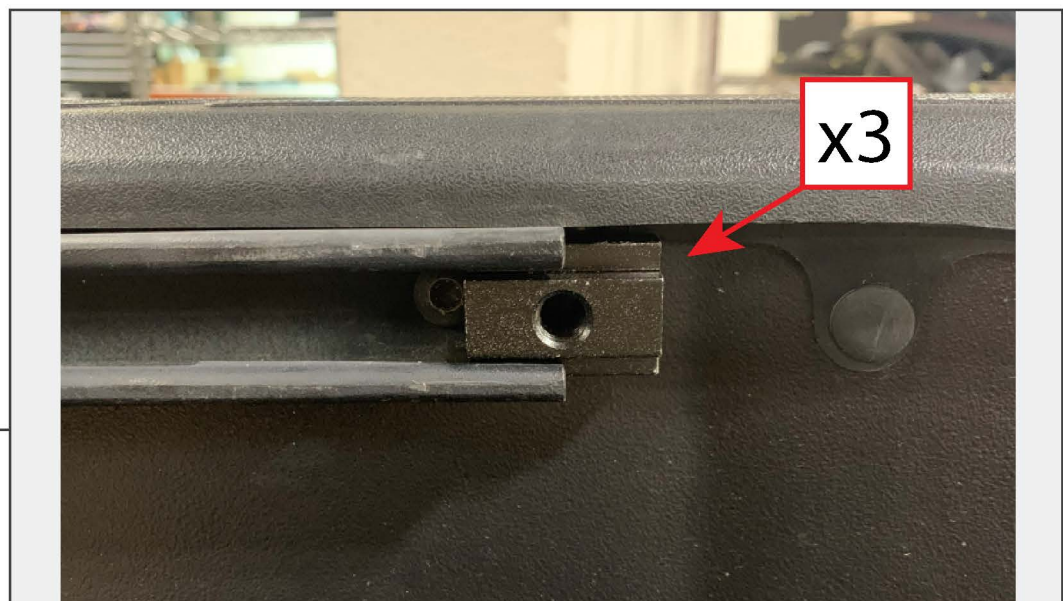


**STEP 2**

Remove the end cap from the bed utility rail. Insert (3) utility rail threaded inserts into the bed rail.




**STEP 3**

Remove (3) T-30 Torx bolts from the top of the bed side storage container.

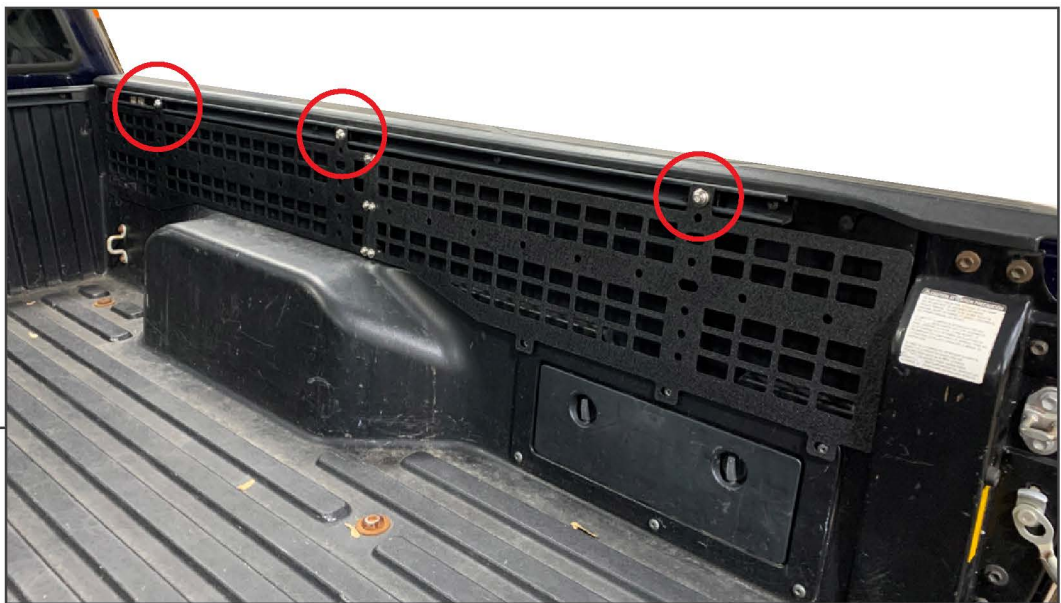

**STEP 4**

Align the bed side molle panel to the vehicle bed side. Secure the top of the panels using (3) M10 x 20mm Allen bolts, (3) M10 lock washers, and (3) M10 flat washers. Adjust the panels to the desired location.

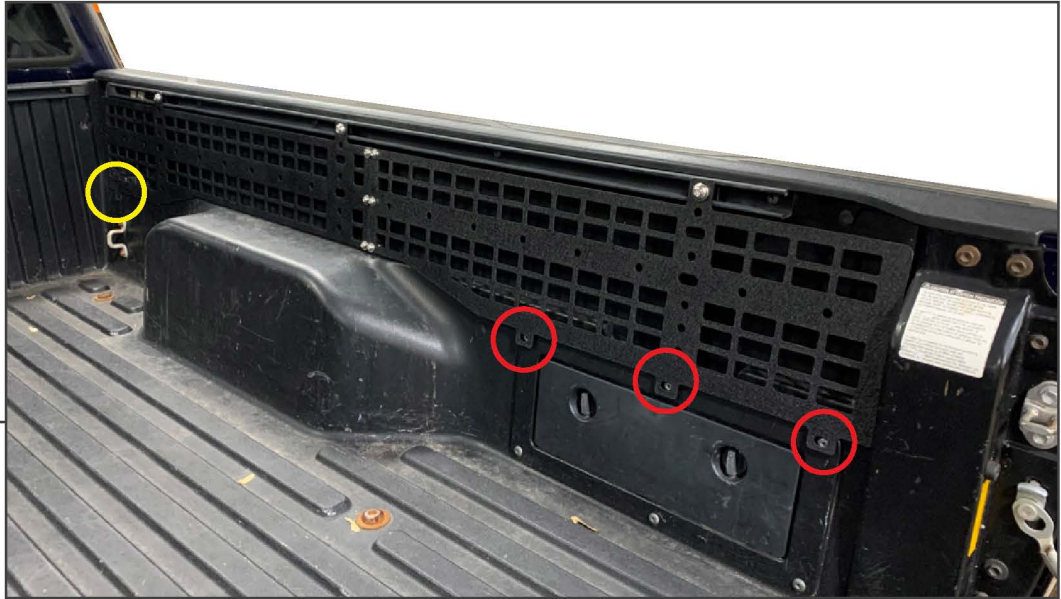**STEP 5**

Install the (3) T-30 Torx bolts through the molle panels, back into the storage container. Tighten all molle panel hardware. Once panel is in suitable position, use (1) self tapping screw at the lower front corner of the panel to secure the panel to the bed.

**STEP 6**

Repeat steps 1-5 to the opposite side of the vehicle. Use the provided (2) straps to secure items to the molle panels.

Installation is now complete.