



BED STORAGE LOCK BOX

(2005-2022+ TACOMA)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Lock Box
- (2) Keys
- (6) M6 Allen Bolts
- (6) M6 Flat Washers
- (1) Rubber Gasket

TOOLS REQUIRED

- T-30 Torx Socket/Key
- 4mm Allen Socket/Key
- Ratchet

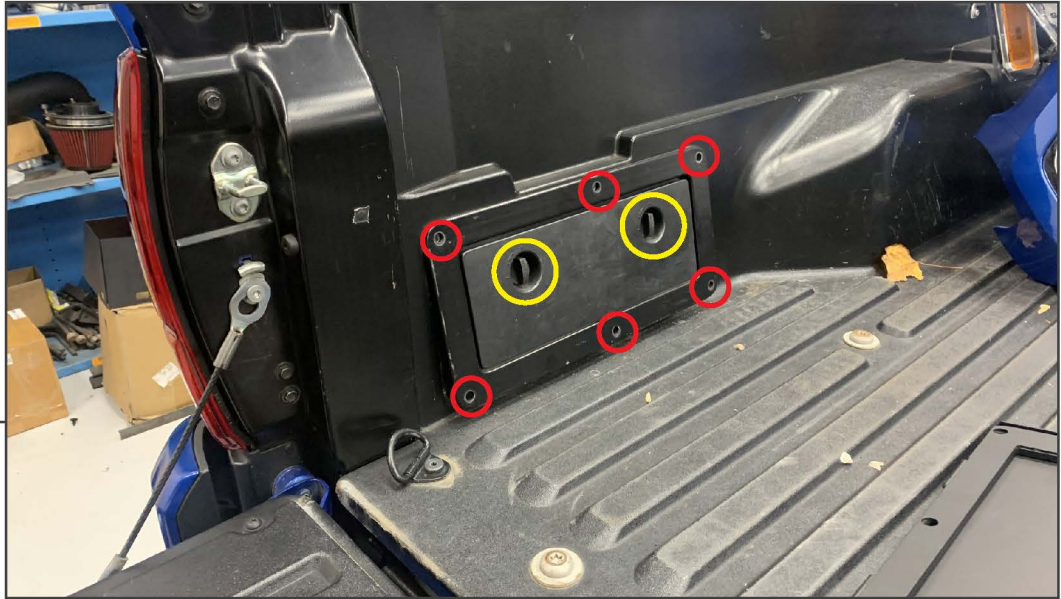

STEP 1

Twist each storage box knob and remove the lid. Then, remove (6) T-30 Torx bolts from the storage container.



STEP 2

Align the lock box to the storage container, and secure into place using (6) M6 Allen bolts and (6) M6 flat washers. Tighten until secure.

Place (1) rubber gasket to the top edge of the storage box.



STEP 3

Close the storage box lid, and lock using the included key.

Installation is now complete.