



# CENTER CONSOLE LOCK BOX

(2016+ TACOMA - WITH BUCKET SEATS)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Center Console Lock Box
- (2) M6 x 35mm Bolts
- (1) Thumb Tack

### TOOLS REQUIRED

---

- 10mm Socket
- Ratchet w/ Extension



## STEP 1

Open and remove all contents from the vehicle center console. Remove the floor insulation pad, and remove (2) 10mm bolts.



## STEP 2


Place the center console lock box into the vehicle center console, and secure to the vehicle using (2) M6 x 35mm bolts, tighten until secure.



## STEP 3 (COMBINATION)

**Combination:** Open the lock box lid using the combination “000”.

With the lid open, use the included thumb tack to press the button on the side of the knob. With the button pressed, set the desired combination. Once set, remove the thumb tack and re-install the lid to the lock box.

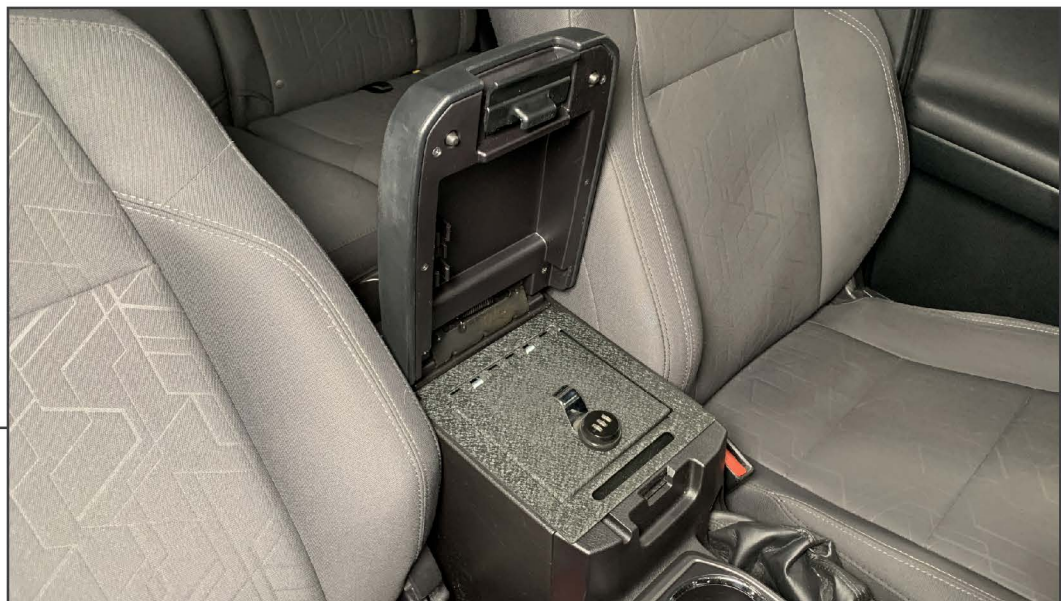

## STEP 4

Installation is now complete.